

96110510 Spacer Kit for the 2006-10 Jeep Commander and Jeep Grand Cherokee


Item	Part No.	Description	Qty.
1	98100392	Push Type Plastic Rivet, 8MM x 20MM	4
2	98009011	Flat Washer, 1/2"	8

The installations for both the Jeep Commander and the Jeep Grand Cherokee require the installer to remove the bumper. Item #1 are plastic rivets that should be used to secure the bumper to the plastic splash guards as shown in the picture below.



Insert 98100392
(4 places)

In some cases, Item #2 may need to be put in between the Rear Mtg. Weldments Items #2 and #3 from the 97101251A manual enclosed in the VMK box. See below:

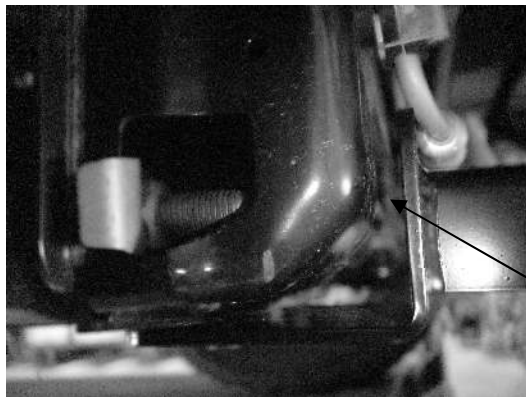

Insert 98009011 as
needed (both sides)