

SNO-WAY®

SNOW & ICE CONTROL EQUIPMENT

SERVICE PARTS MANUAL

REVOLUTION V-BOX SPREADER

MODEL RVB10 - 10 CUBIC FEET
MODEL RVBD10 - 10 CUBIC FEET
MODEL RVB500 - 0.5 CUBIC YARD
MODEL RVBD500 - 0.5 CUBIC YARD
MODEL RVB750 - 0.75 CUBIC YARD
MODEL RVB1500 - 1.5 CUBIC YARD
MODEL RVB2000 - 2 CUBIC YARD
MODEL RVB2500 - 2.5 CUBIC YARD
MODEL RVB3000 - 3.0 CUBIC YARD
MODEL RVB3500 - 3.5 CUBIC YARD
MODEL RVB4300 - 4.3 CUBIC YARD

SPREADERS WITH SERIAL NUMBERS AFTER:
1RVB100000, 1RVBD100000, 50RVB100000, 50RVBD100000,
75RVB100000, 150RVB100000, 200RVB100000, 250RVB100000,
300RVB100000, 350RVB100000, 430RVB100000

CHUTES WITH SERIAL NUMBERS AFTER:
LC100000, SC100000, L3C100000, S3C100000

TABLE OF CONTENTS

	Page
PARTS LIST INTRODUCTION	2
Hopper - RVB 10.....	3
Hopper - RVB 500, 750, 1500, 2000, 2500, 3000.....	5
Hopper - RVB 3500, 4300.....	7
Extension - RVB 3000 and 4300.....	9
Inverted V - RVB 10.....	10
Inverted V - RVB 500.....	11
Inverted V - RVB 750.....	12
Inverted V - RVB 1500, 2000, 2500, 3000.....	13
Inverted V - RVB 3500, 4300.....	14
Hopper Screen - RVB 10.....	15
Hopper Screen - RVB 500.....	17
Hopper Screen - RVB 1500, 2000, 2500, 3000, 3500, 4300.....	19
Auger Drive - RVB 10, 500, 750, 1500, 2000, 2500, 3000.....	21
Auger Drive - RVB 3500, 4300.....	23
Chute and Spinner.....	25
Decals - RVB 10, 500, 750, 1500.....	27
Decals - RVB 2000, 2500, 3000, 3500, 4300.....	29
Drop Spreader Hood - RVB 10, RVB 500	30
Accessories.....	31
Numerical Index.....	33

NOTE: For CONTROLLER SYSTEM WIRING - See Manual 97101915 - Snow Plow and Spreader Controls for parts breakdowns and details.

PARTS LIST INTRODUCTION

Our dealership network stands by to provide you with any assistance you may require, including genuine Sno-Way service parts. All parts should be obtained from or ordered through your dealer. Give complete information about the part(s) at time of order, and include the Model and applicable Serial Numbers of your machine.

NOTE: The Model and all Serial number information should be recorded on page two of your Installation and Owner's Manual for ease of reference. The location of these numbers on the machine is detailed in the manual as well.

"Right" and "Left" are determined from a position sitting on the Operators seat of the vehicle.

We reserve the right to make changes or improvements in the design or construction of any part without incurring the obligation to install such changes in any unit previously delivered.

USING THIS PARTS LIST

A sample parts listing is shown below:

- The **"ITEM"** in column one is the number used in the corresponding illustration.
- The **"PART NO."** in column two is the number used to order replacement parts. If a number does not appear in the column the part is only available by ordering the complete assembly.
- The **"DESCRIPTION"** in column three is the name of the replacement part. At times the name may be indented, this means that the indented parts are part of the preceding assembly.
- The **"QTY."** in column four is the quantity needed to service the assembly illustrated, not the complete product.

ITEM	PART NO.	DESCRIPTION	QTY.
1	96100083	O-ring	1
2	96001529	Elbow	3
3	98100036	Capscrew, Hex.,3/8"-16NC x 7/8"	9


PART DESCRIPTION ABBREVIATIONS

Our Part Descriptions use common industry standard abbreviations in the naming conventions for many individual items. The list below details the abbreviations commonly used throughout this manual. If a specific abbreviation is not listed, contact any Sno-Way Dealer for clarification.

ABBREV.	DESCRIPTION
BRKT	BRACKET
CB	CARRIAGE BOLT
CLP	CLEVIS PIN
COTP	COTTER PIN
DP	DOWN PRESSURE
DS	DRIVER SIDE
EB	EYE BOLT
GR	GRADE
HDWE	HARDWARE
HHCS	HEX HEAD CAP SCREW
HN	HEX NUT
HNILN	HEX NYLON INSERT LOCKNUT

ABBREV.	DESCRIPTION
HW	HARD WIRED
HWH	HEX WASHER HEAD
LN	LOCK NUT
LW	HELICAL LOCK WASHER
PS	PASSENGER SIDE
PW	PLAIN FLAT WASHER
SHCS	SOCKET HEAD CAP SCREW
SLT	SLOTTED
SS	STAINLESS STEEL
ST	SELF-THREADING
UB	U-BOLT
WL	WIRELESS


HOPPER - RVB 10

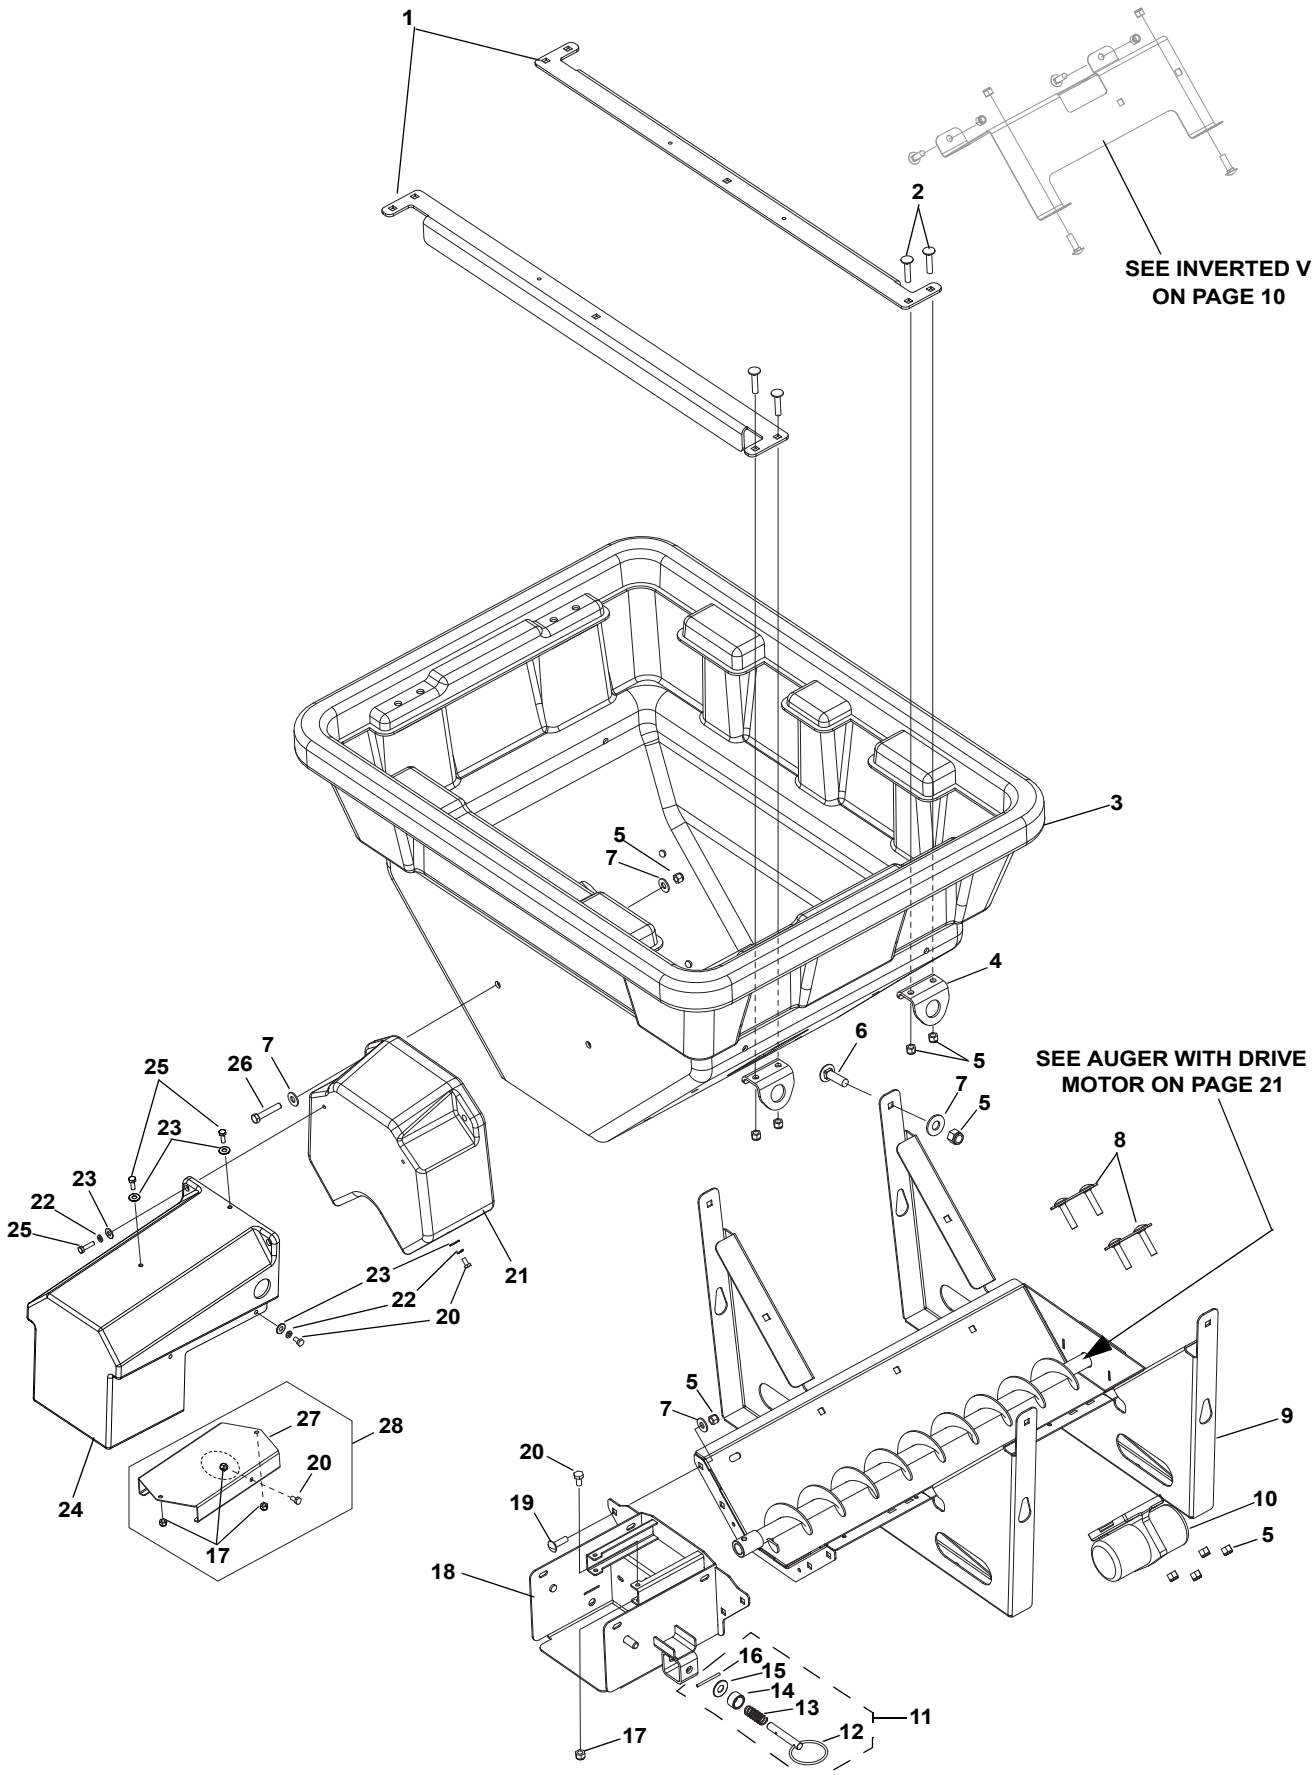

HOPPER - RVB 10

ITEM	PART NO.	DESCRIPTION	QTY
1	96116414	Grate Support, RVB 10	2
2	98100536	CB, 3/8"-16 x 1.75", SS	10
3		Hopper	1
4	96116412	Bracket, Tie-Down	4
5	98100339	LN, 3/8"-16, SS	31
6	98100356	CB, 3/8"-16 x 1-1/4", SS	13
7	98100124	PW, 3/8", SS	13
8	96116210	Bolt Plate	2
9		Weldment, Trough	1
10	96114903	Vibrator	1
11	96115505	Kit, Latch Pin (Includes qty 2 each; Items 12,13, 14, 15, 16)	1
12		Latch Pin, Chute	2
13		Spring, Latch Pin.....	2
14		Bushing, Spacer.....	2
15		PW, 1.25" O.D. x 0.531" I.D. x 5/8".....	2
16		Spring Pin, 5/32" x 2"	2
17	98100336	LN, 1/4"-20, SS	3
18		Weldment, Motor Mount, RVB.	1
19	98100359	CB, 3/8"-16 x 1, SS.....	4
20	98100344	HHCS, 1/4"-20 x 1/2", SS	7
21		Baffle.....	1
22	98009226	LW, 1/4", SS.....	8
23	98100122	PW, 1/4", SS	10
24	96116363	Cover, Auger Drive	1
25	98100334	HHCS, 1/4"-20 x 3/4", SS	4
26	98100541	HHCS, 3/8"-16 x 2", SS	2
27	96118848	Bracket, Receiver	1
28	96118975	Kit, Receiver Bracket (Includes items 17, 20, 23, 25, 27)	1


HOPPER - RVB 500, 750, 1500, 2000, 2500, 3000

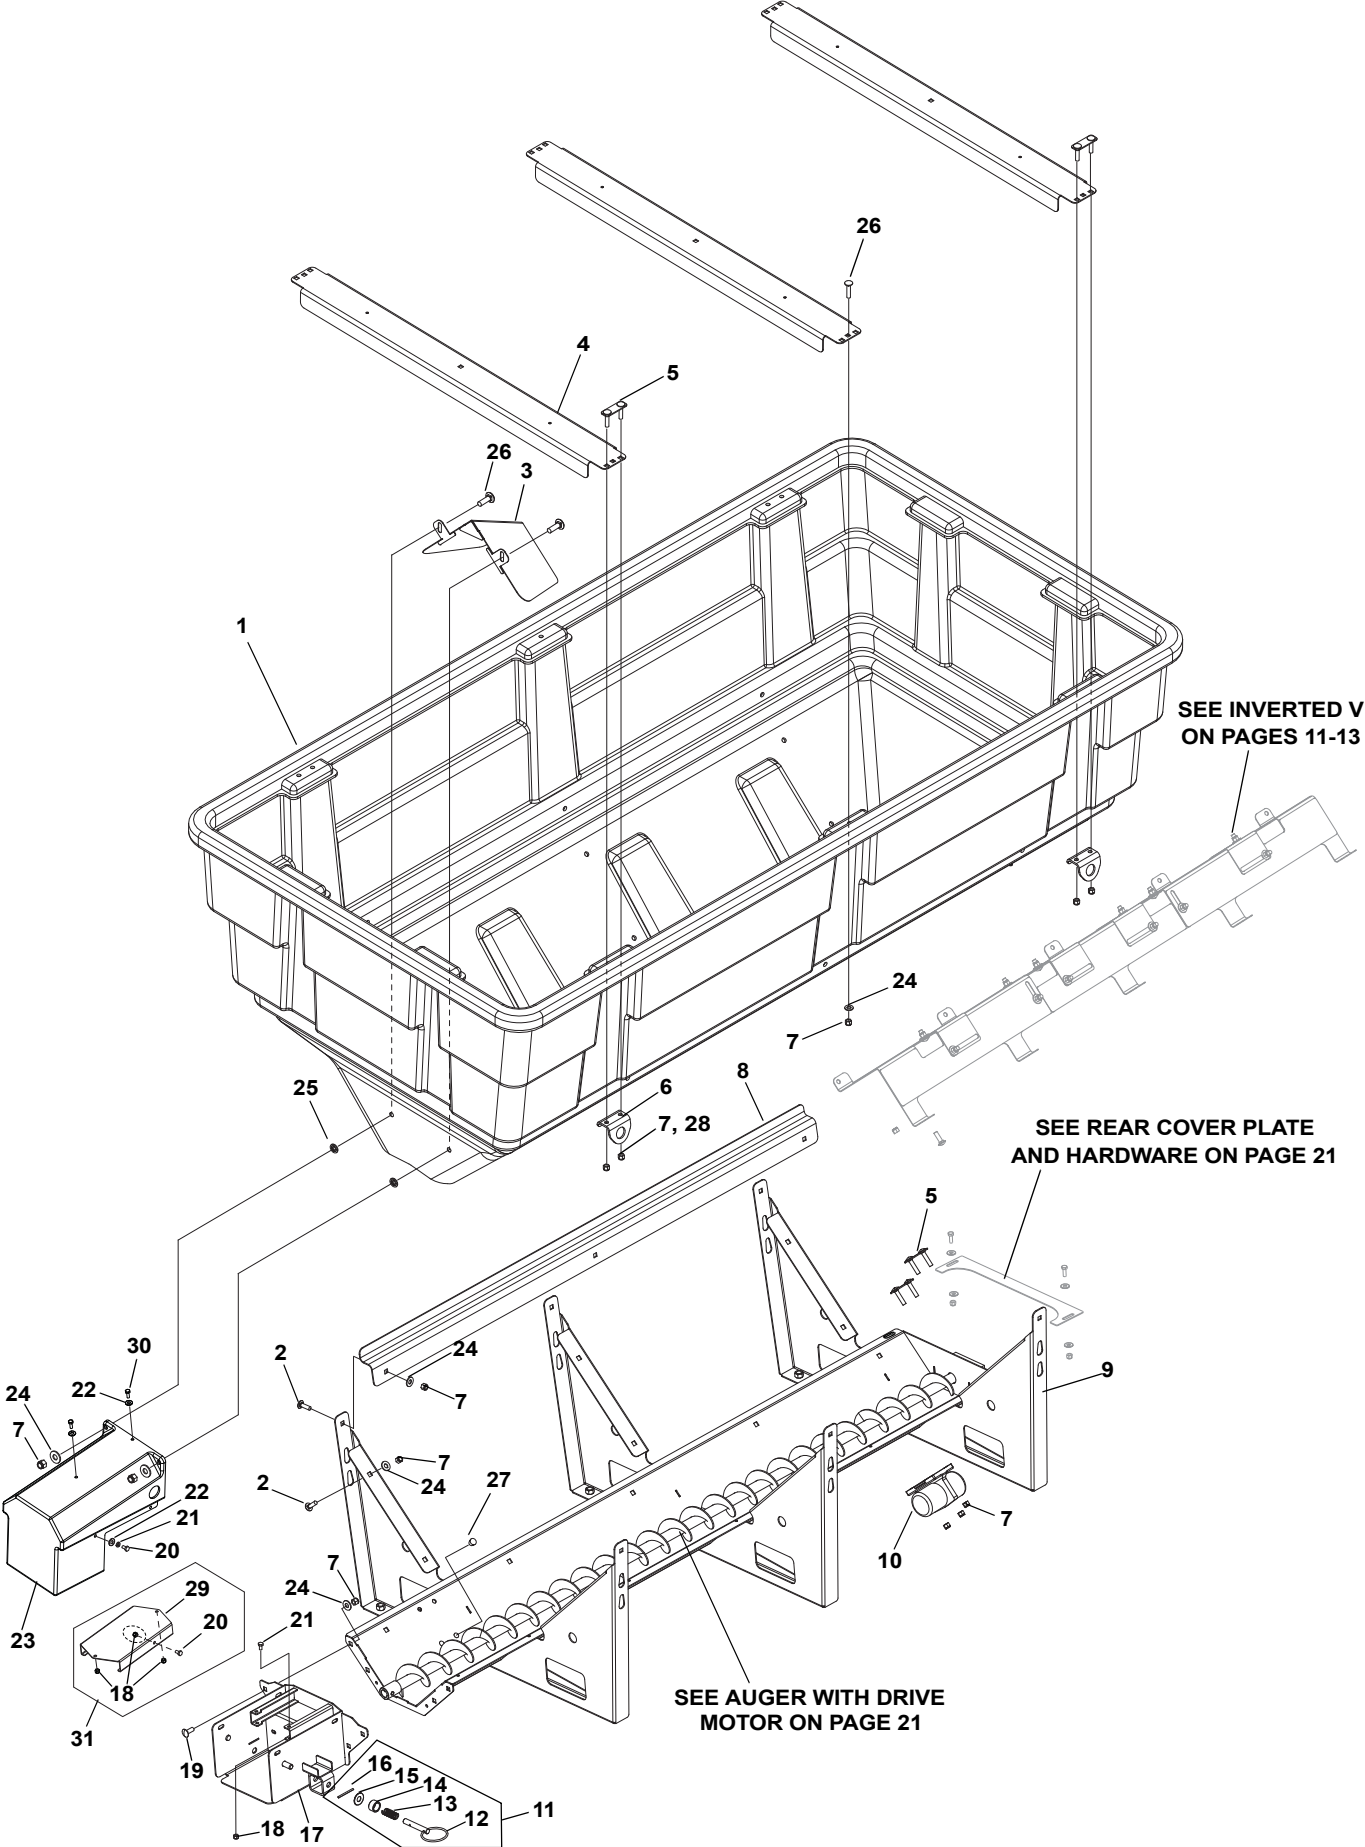

HOPPER - RVB 500, 750, 1500, 2000, 2500, 3000

ITEM	PART NO.	DESCRIPTION	QTY
1		Hopper	1
2	98100356	CB, 3/8"-16 x 1-1/4", SS (RVB 500, 750).....	18
		(RVB 1500, 2000, 2500, 3000).....	26
3	96116477	Weldment, Baffle	1
4	96116457	Grate Support, RVB 500	2
	96116457	Grate Support, RVB 750	3
	96116458	Grate Support, RVB 1500, 2000	3
	96116459	Grate Support, RVB 2500, 3000	3
5	96116210	Bolt Plate (RVB 500).....	6
		(RVB 750).....	8
		(RVB 1500, 2000, 2500, 3000).....	10
6	96116412	Bracket, Tie-Down.....	4
7	98100339	LN, 3/8"-16, SS (RVB 500).....	38
		(RVB 750).....	42
		(RVB 1500, 2000).....	48
		(RVB 2500, 3000).....	40
8		Bracket, Hopper Support (RVB 2500, 3000 Only).....	2
9		Weldment, Trough.....	1
10	96114903	Vibrator (RVB 500, 750).....	1
		(RVB 1500, 2000, 2500, 3000).....	2
11	96115505	Kit, Latch Pin (Includes qty 2 each; Items 12,13, 14, 15, 16).....	1
12		Latch Pin, Chute.....	2
13		Spring, Latch Pin	2
14		Bushing, Spacer	2
15		PW, 1.25" O.D. x 0.531" I.D. x 5/8"	2
16		Spring Pin, 5/32" x 2".....	2
17		Weldment, Motor Mount, RVB.....	1
18	98100336	LN, 1/4"-20, SS	3
19	98100359	CB, 3/8"-16 x 1, SS	4
20	98009226	LW, 1/4", SS	8
21	98100344	HHCS, 1/4"-20 x 1/2", SS.....	4
22	98100122	PW, 1/4", SS.....	6
23	96116363	Cover.....	1
24	98100124	PW, 3/8", SS (RVB 500).....	18
		(RVB 750).....	20
		(RVB 1500, 2000, 2500, 3000).....	26
25	98100565	Washer, Retaining	2
26	98100536	CB, 3/8"-16 x 1.75", SS	4
27	96116473	Plug, Panel, 3/8" (RVB 1500 and larger without 2nd vibrator)	2
28	98100593	LN, 3/8"-16, Distorted Thread, SS (RVB 2500, 3000 Only)	8
29	96118848	Bracket, Receiver.....	1
30	98100334	HHCS, 1/4"-20 x 3/4", SS.....	2
31	96118975	Kit, Receiver Bracket (Includes items 18, 20, 22, 29, 30).....	1


HOPPER - RVB 3500 and 4300

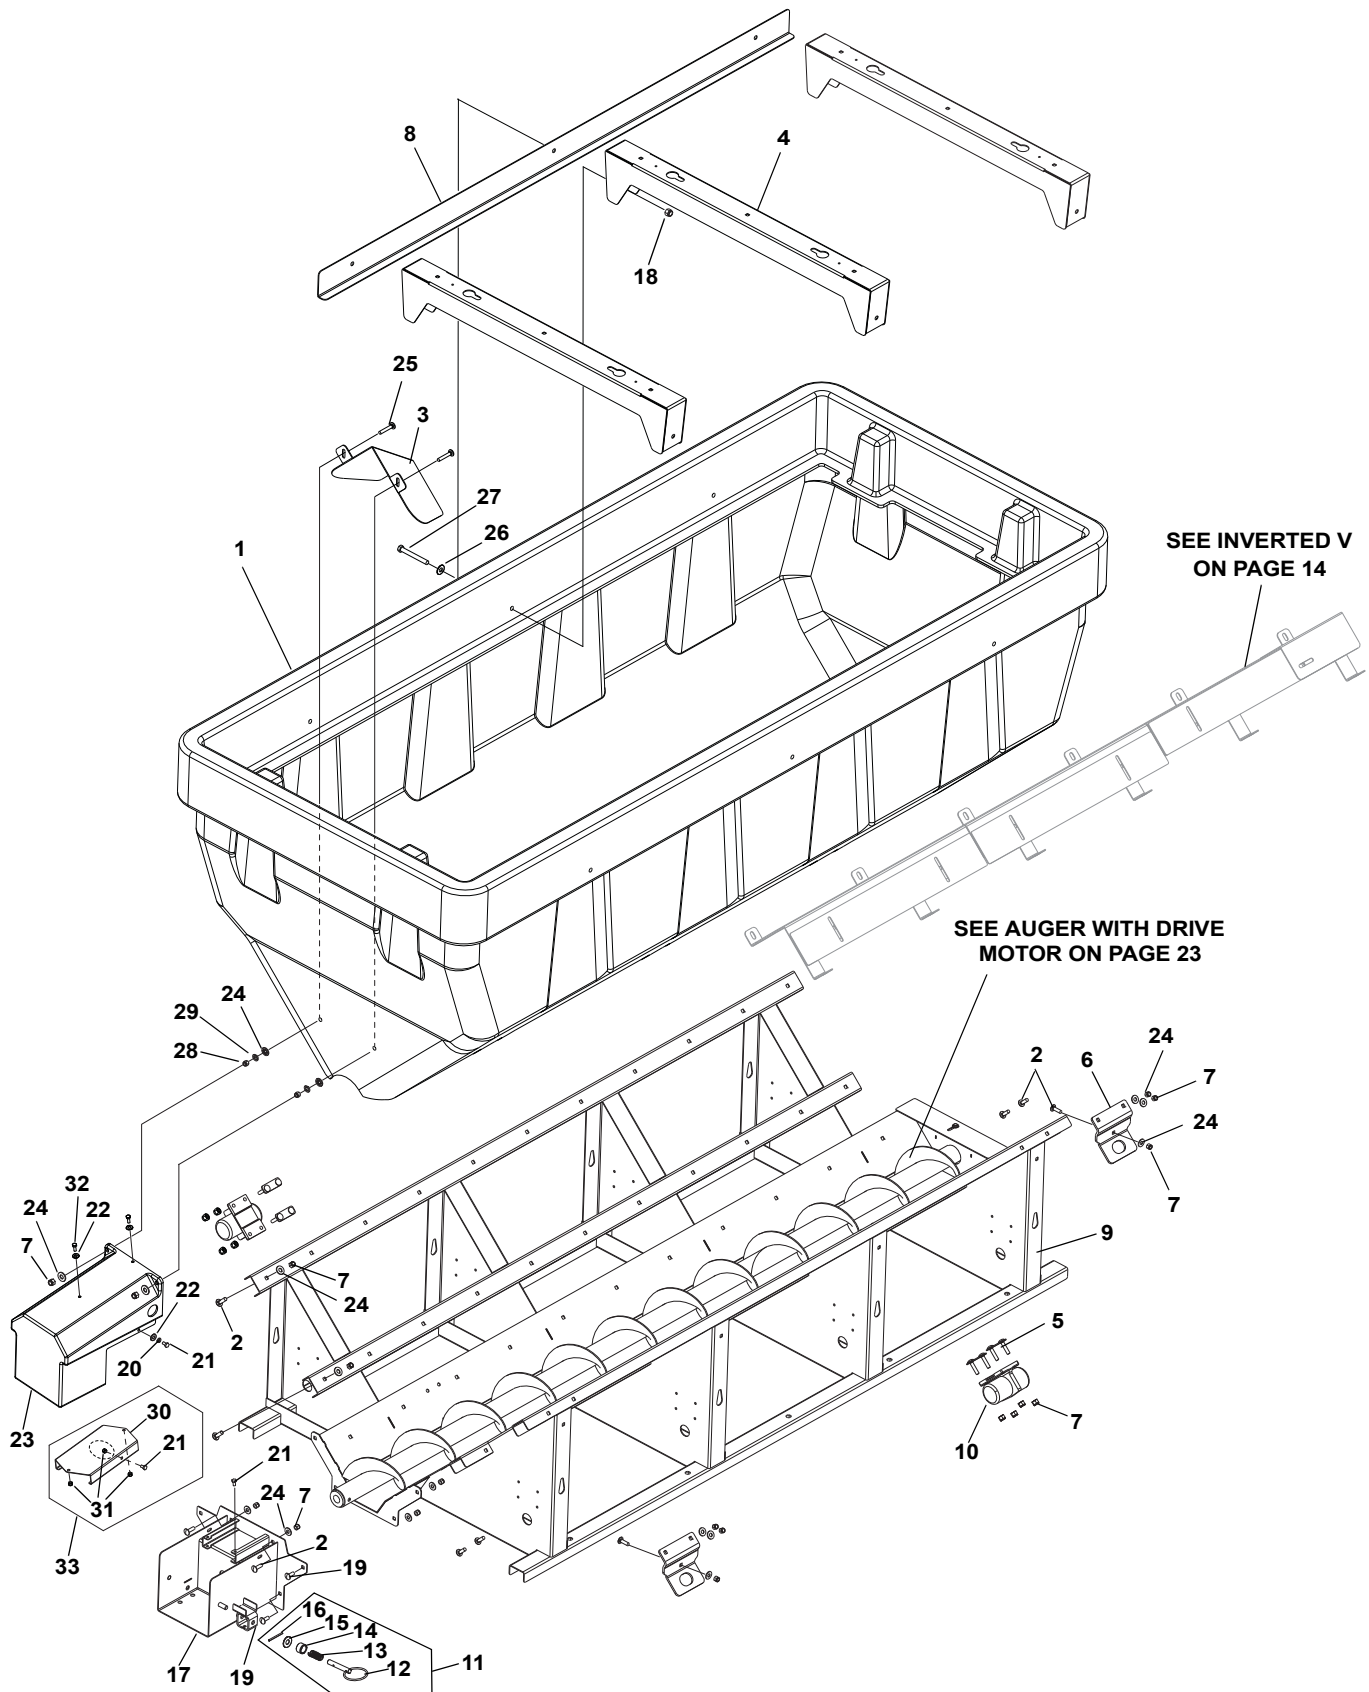

HOPPER - RVB 3500 and 4300


ITEM	PART NO.	DESCRIPTION	QTY
1		Hopper	1
2	98100356	CB, 3/8"-16 x 1-1/4", SS.....	70
3	96116943	Weldment, Baffle	1
4	96117659	Grate Support.....	3
5	96116210	Bolt Plate.....	4
6	96116902	Bracket, Tie-Down.....	4
7	98100339	LN, 3/8"-16, SS	93
8	96116920	Bracket, Hopper Support.....	2
9		Weldment, Trough.....	1
10	96114903	Vibrator.....	2
11	96115505	Kit, Latch Pin (Includes qty 2 each; Items 12,13, 14, 15, 16).....	1
12		Latch Pin, Chute.....	2
13		Spring, Latch Pin	2
14		Bushing, Spacer	2
15		PW, 1.25" O.D. x 0.531" I.D. x 5/8"	2
16		Spring Pin, 5/32" x 2".....	2
17		Weldment, Motor Mount, RVB.....	1
18	98100349	LN, 1/2"-13, SS	4
19	98100359	CB, 3/8"-16 x 1, SS	4
20	98009226	LW, 1/4", SS	8
21	98100344	HHCS, 1/4"-20 x 1/2", SS.....	4
22	98100122	PW, 1/4", SS.....	6
23	96118596	Cover.....	1
24	98100124	PW, 3/8", SS.....	71
25	98100128	CB, 3/8"-16 x 2-1/4".....	2
26	98100347	PW, 1.25" O.D. x 0.531" I.D. x 5/8"	2
27	98100601	HHCS, 1/2"-13 x 4-1/4", SS.....	6
28	98100120	HN, 3/8"-16, SS.....	2
29	98100125	LW, 3/8"	2
30	96118848	Bracket, Receiver.....	1
31	98100336	HN, 1/4"-20, SS.....	2
32	98100334	HHCS, 1/4"-20 x 3/4", SS.....	2
33	96118975	Kit, Receiver Bracket (Includes items 21, 22, 30, 31, 32).....	1

EXTENSION - RVB 3000 and 4300

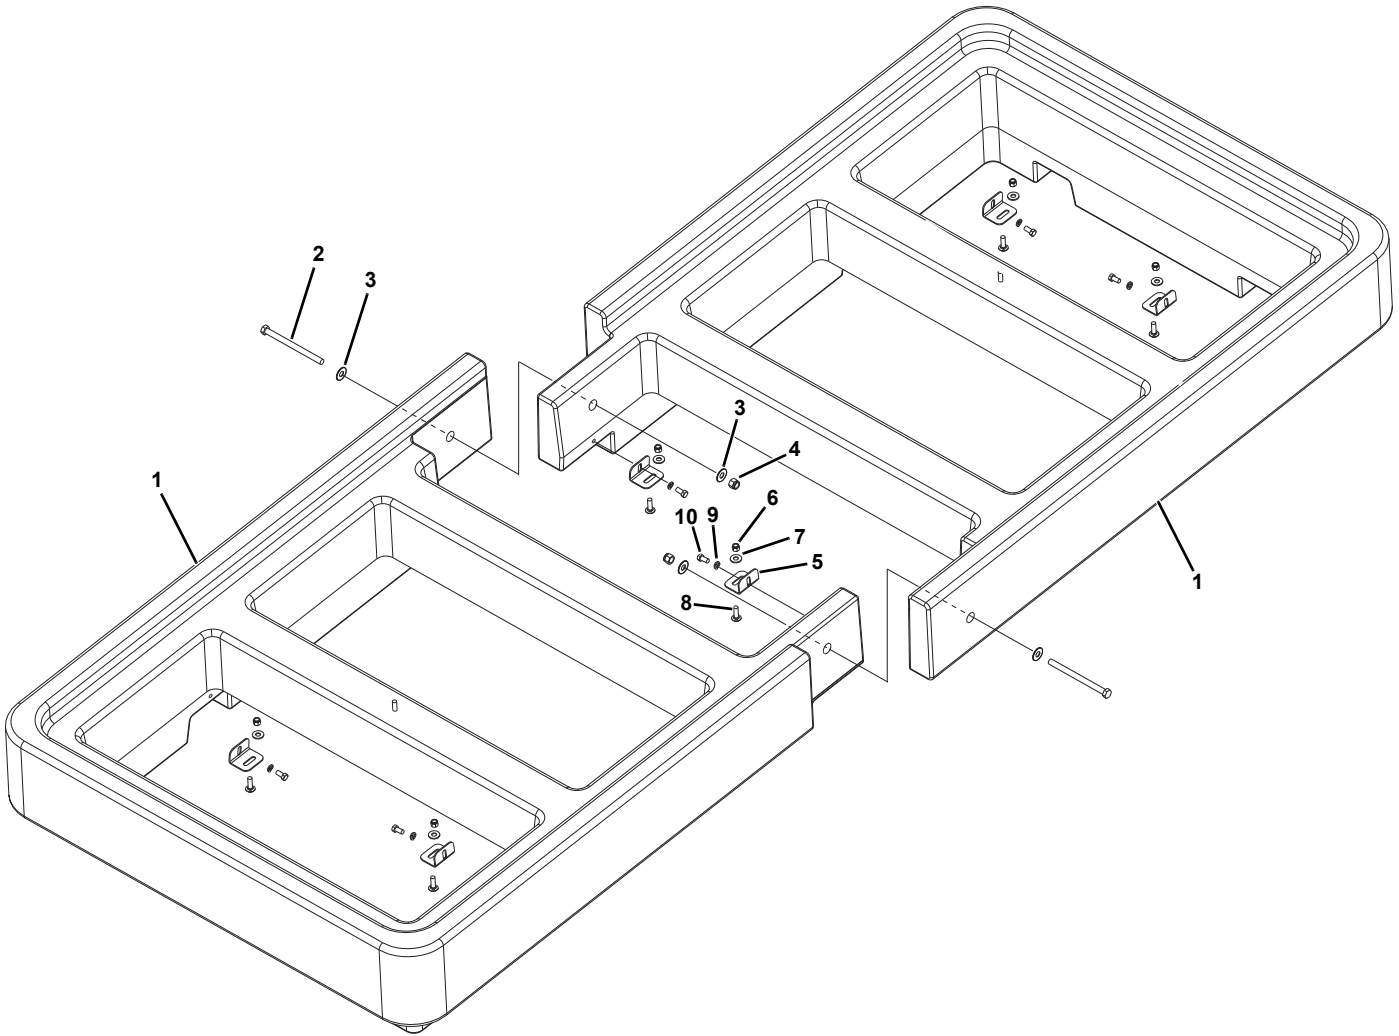


ITEM	PART NO.	DESCRIPTION	QTY
1		Extension SS	2
2		HHCS, 1/2"-12 x 6-1/2", SS	2
3		PW, 2" O.D. x 0.531" I.D., SS	4
4		LN, 1/2"-13, SS	2
5		Bracket, Extension Mount, SS	6
6		LN, 3/8"-16, SS	6
7		PW, 3/8", SS (RVB 3000).....	18
		PW, 3/8", SS (RVB 4300).....	6
8		HHCS, 3/8"-16 x 0.875", SS (RVB 3000).....	6
		CB, 3/8"-16 x 1-1/4", SS (RVB 4300).....	6
9		LW, 3/8", SS	6
10		HHCS, 3/8"-16 x 3/4", SS	6
11	96118044	Kit, Hardware, RVB3000 (Not Shown) (Includes Items 2-10)	1
	96118008	Kit, Hardware, RVB4300 (Not Shown) (Includes Items 2-10)	1

INVERTED V - RVB 10

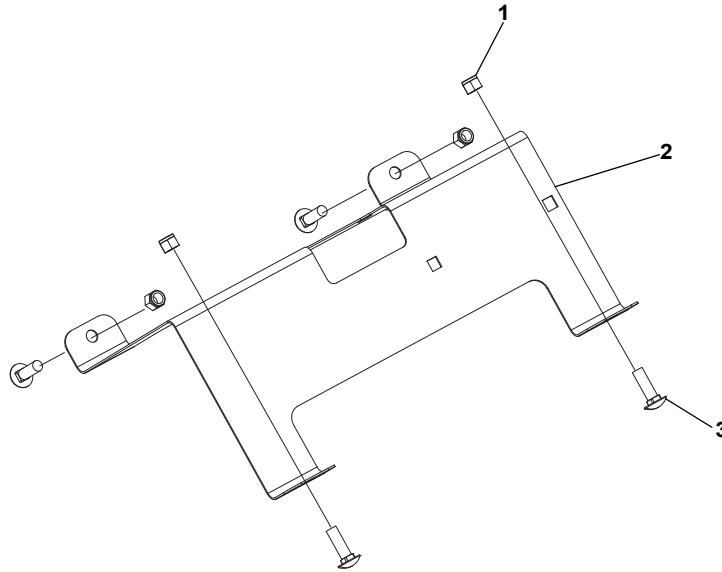


ITEM	PART NO.	DESCRIPTION	QTY
1	98100339	LN, 3/8"-16, SS	4
2	96116226	Bracket, Inverted V, End.....	1
3	98100356	CB, 3/8"-16 x 1.25"	4

INVERTED V - RVB 500

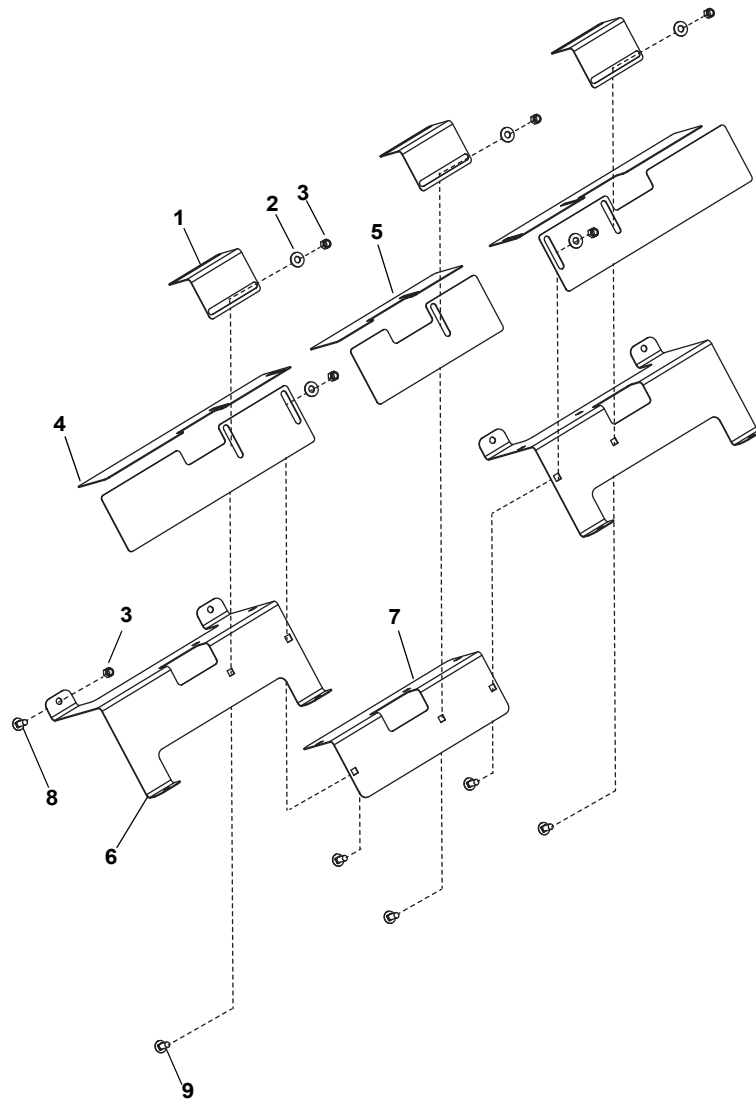


ITEM	PART NO.	DESCRIPTION	QTY
1	96116215	Bracket, Inverted V, Top	3
2	98100124	PW, 3/8" SS	10
3	98100339	LN, 3/8"-16, SS	18
4	96116227	Plate, Inverted V, End	4
5	96116230	Plate, Inverted V, Center	2
6	96116226	Bracket, Inverted V, End	2
7	96116229	Bracket, Inverted V, Center	1
8	98100356	CB, 3/8"-16 x 1.25", SS	8
9	98100359	CB, 3/8"-16 x 1.00", SS	10

INVERTED V - RVB 750

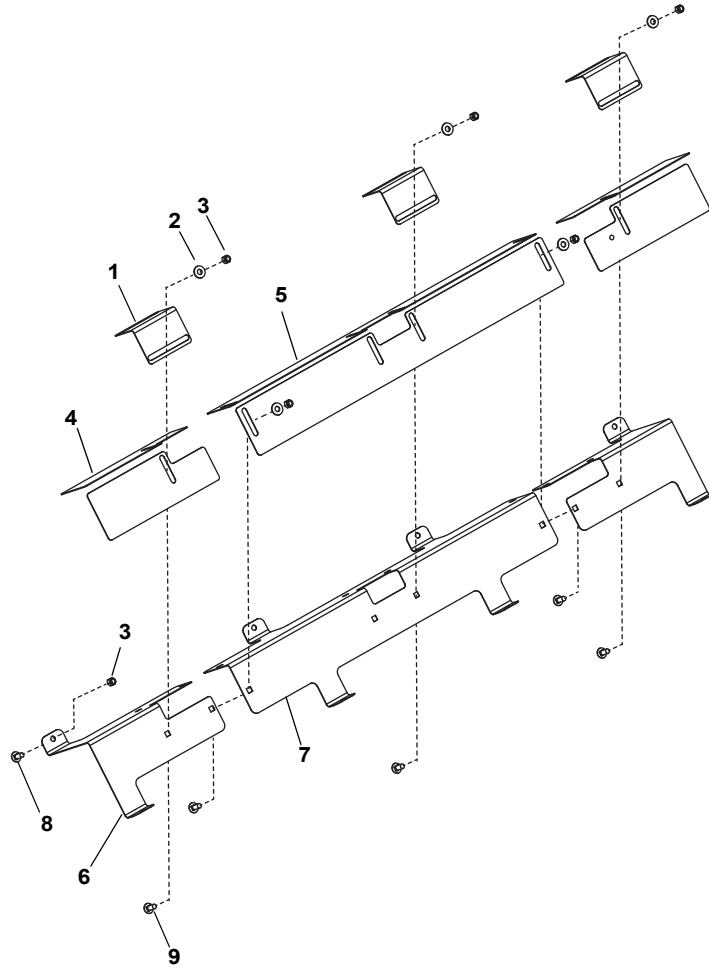


ITEM	PART NO.	DESCRIPTION	QTY
1	96116215	Bracket, Inverted V, Top	3
2	98100124	PW, 3/8" SS	12
3	98100339	LN, 3/8"-16, SS	20
4	96116224	Plate, Inverted V, End	4
5	96116221	Plate, Inverted V, Center	2
6	96116223	Bracket, Inverted V, End	2
7	96116220	Bracket, Inverted V, Center	1
8	98100356	CB, 3/8"-16 x 1.25", SS	8
9	98100359	CB, 3/8"-16 x 1.00", SS	12

INVERTED V - RVB 1500, 2000, 2500, 3000

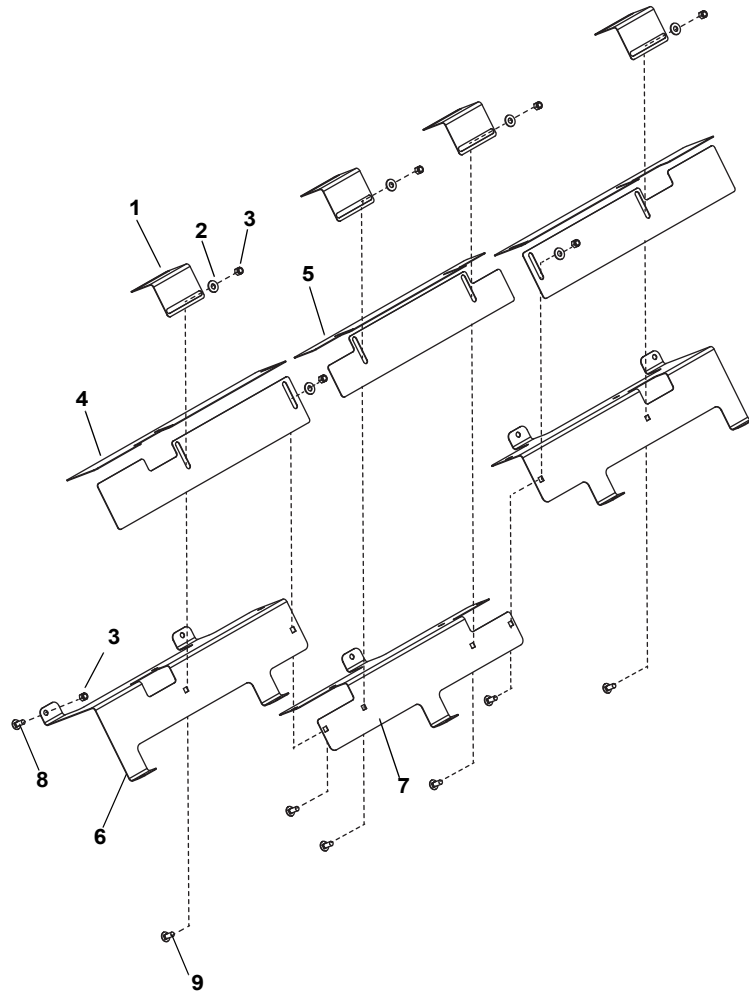


ITEM	PART NO.	DESCRIPTION	QTY
1	96116215	Bracket, Inverted V, Top	4
2	98100124	PW, 3/8" SS.....	12
3	98100339	LN, 3/8"-16, SS	22
4	96116214	Plate, Inverted V, End.....	4
5	96116218	Plate, Inverted V, Center	2
6	96116213	Bracket, Inverted V, End.....	2
7	96116217	Bracket, Inverted V, Center	1
8	98100356	CB, 3/8"-16 x 1.25", SS.....	10
9	98100359	CB, 3/8"-16 x 1.00", SS.....	12

INVERTED V - RVB 3500 and 4300

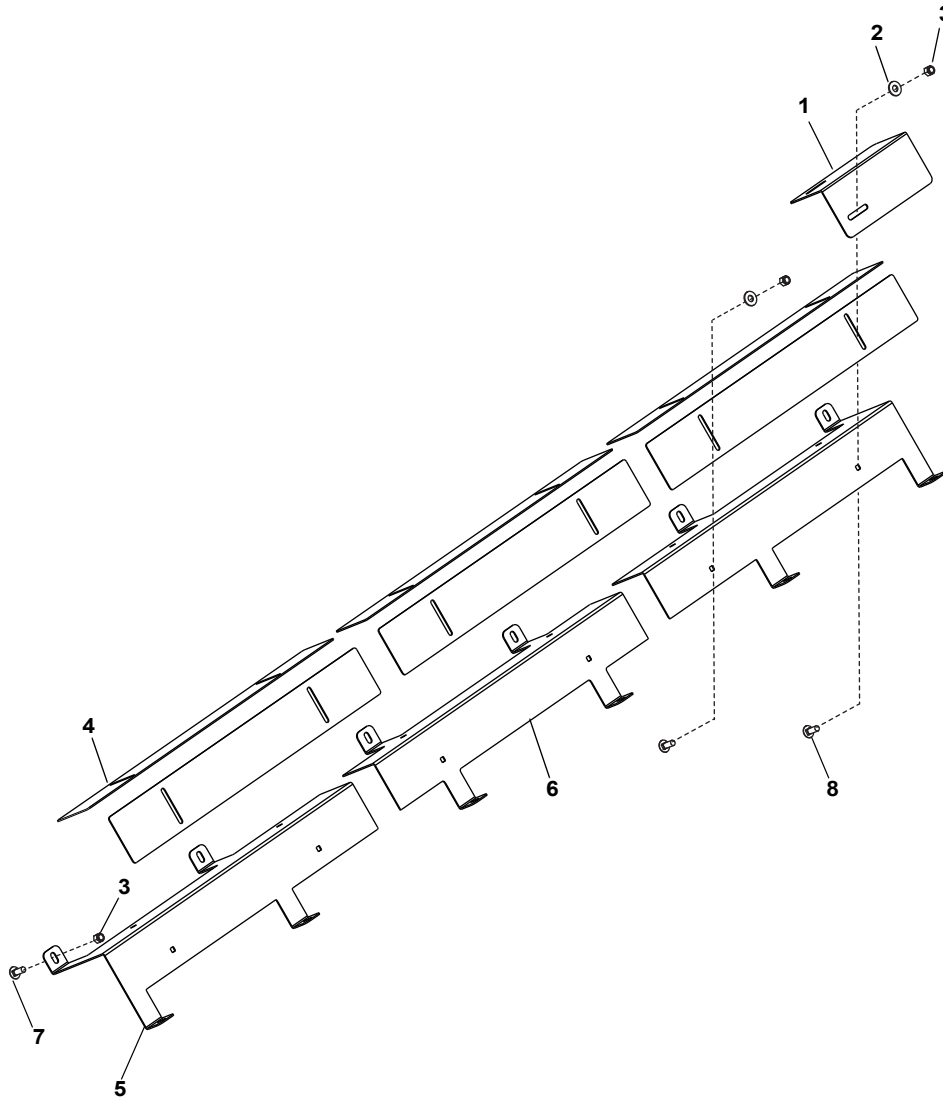

ITEM	PART NO.	DESCRIPTION	QTY
1	96116907	Bracket, Inverted V, Top	1
2	98100124	PW, 3/8" SS	12
3	98100339	LN, 3/8"-16, SS	22
4	96116944	Plate, Inverted V, End	6
5	96116905	Bracket, Inverted V, End	2
6	96116906	Bracket, Inverted V, Center	1
7	98100356	CB, 3/8"-16 x 1.25", SS.....	10
8	98100359	CB, 3/8"-16 x 1.00", SS.....	12


HOPPER SCREEN - RVB 10

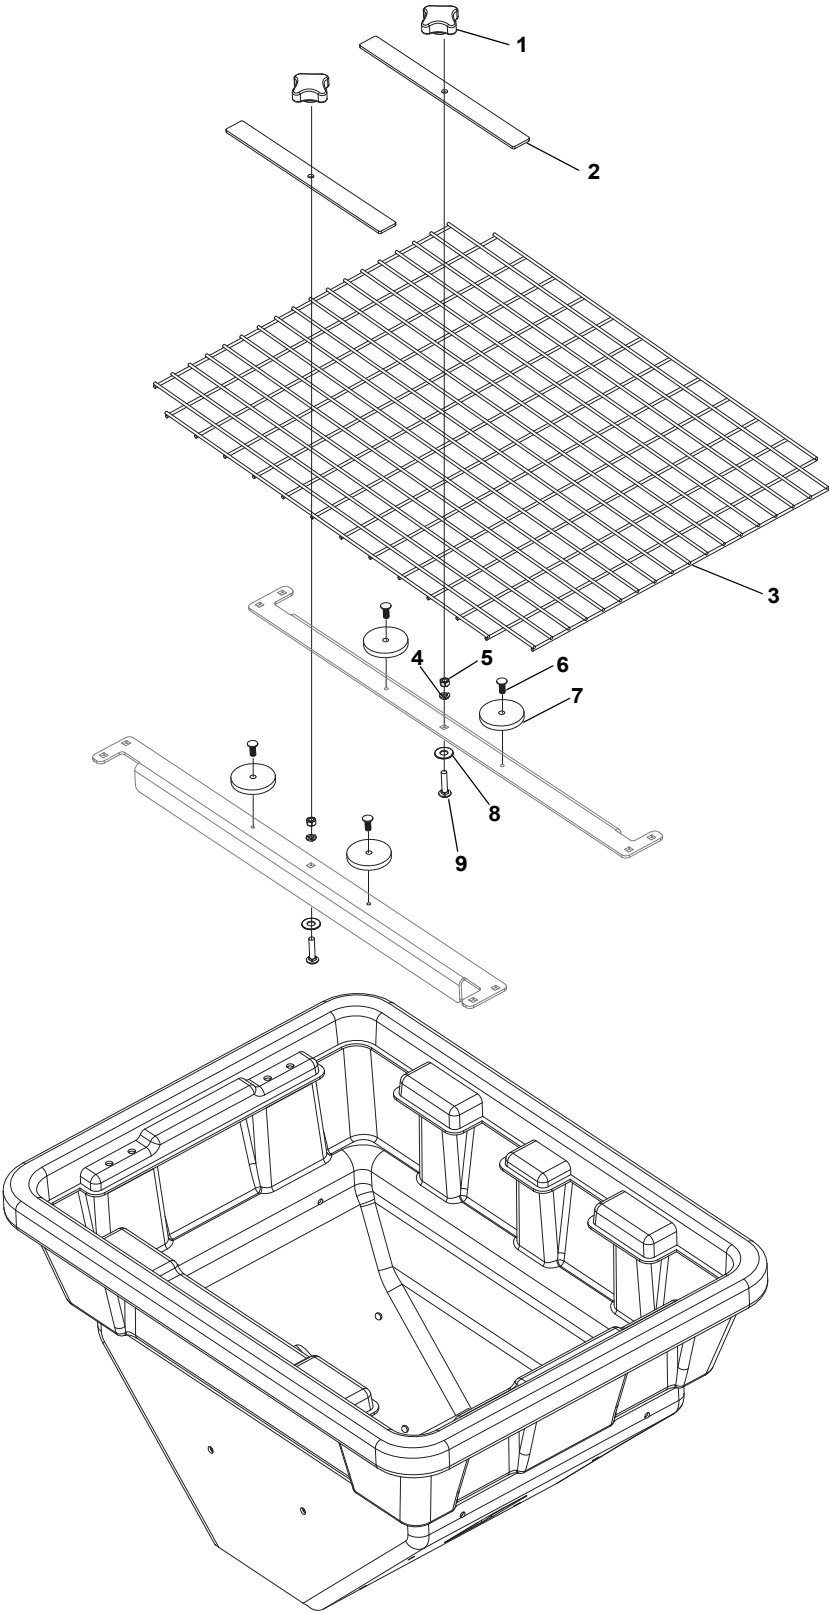

HOPPER SCREEN - RVB 10

ITEM	PART NO.	DESCRIPTION	QTY
1	96116419	Knob	2
2	96116472	Plate, Grate.....	2
3	96116421	Grate, Top Screen, RVB 10	1
4	98100120	HN, 3/8"-16, SS	2
5	98100125	LW, 3/8"	2
6	98100590	Rivet, Ribbed Shank, Nylon	4
7	96115013	Isolator, Screen.....	4
8	98100347	PW, 1.25" O.D. x 0.531" I.D. x 5/8".....	2
9	98100536	CB, 3/8"-16 x 1.75", SS	2



HOPPER SCREEN - RVB 500

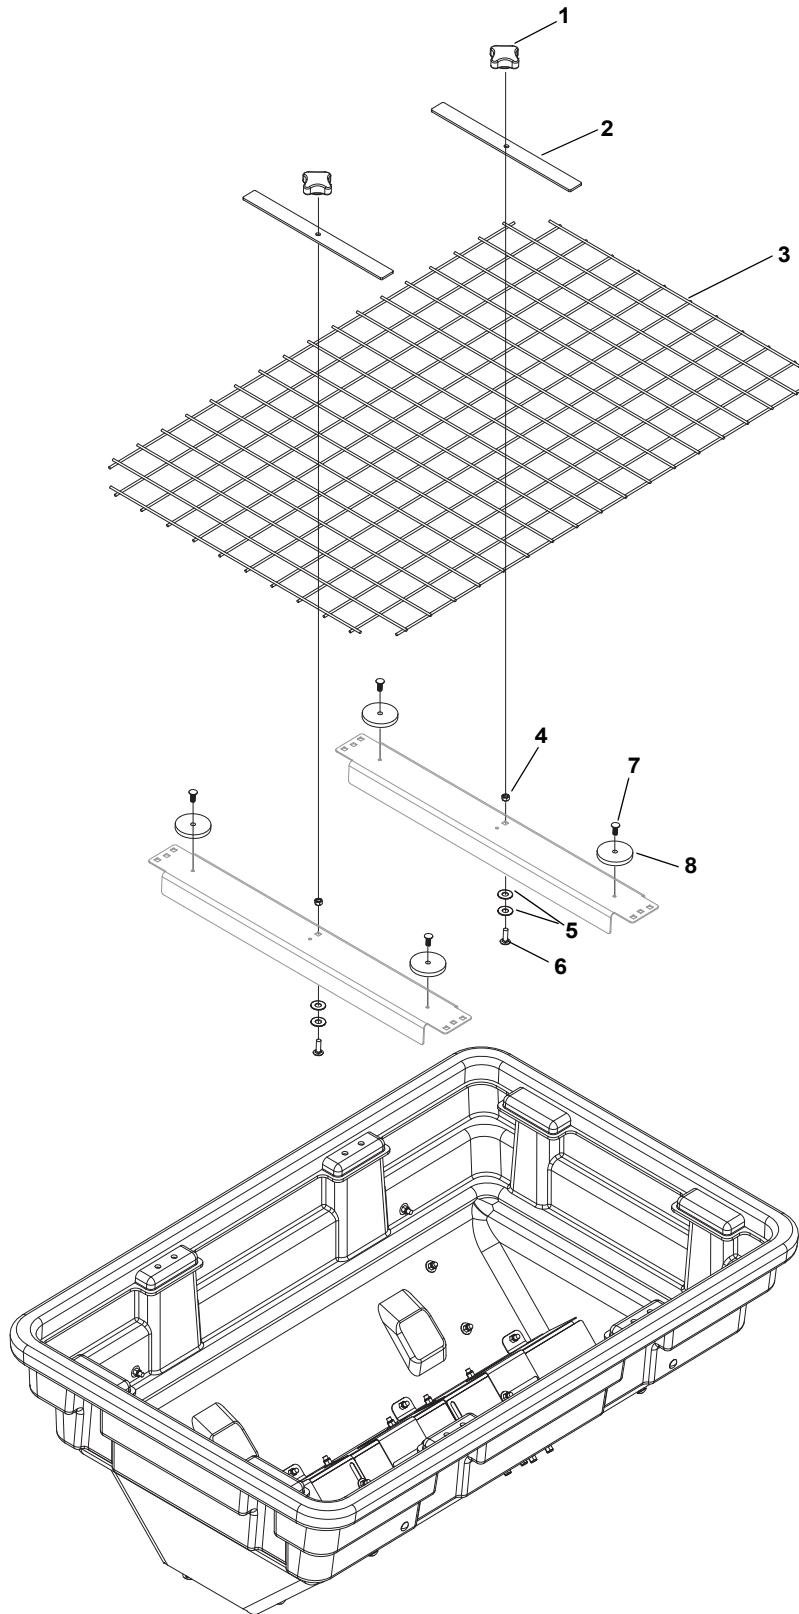

HOPPER SCREEN - RVB 500

ITEM	PART NO.	DESCRIPTION	QTY
1	96116419	Knob.....	2
2	96116472	Plate, Grate.....	2
3	96115345	Grate, Top Screen, RVB 500.....	1
4	98100120	HN, 3/8"-16, SS.....	2
5	98100347	PW, 1.25" O.D. x 0.531" I.D. x 5/8".....	4
6	98100356	CB, 3/8"-16 x 1.25", SS.....	2
7	98100590	Rivet, Ribbed Shank, Nylon.....	4
8	96115013	Isolator, Screen.....	4

HOPPER SCREEN - RVB 750, 1500, 2000, 2500, 3000, 3500, 4300

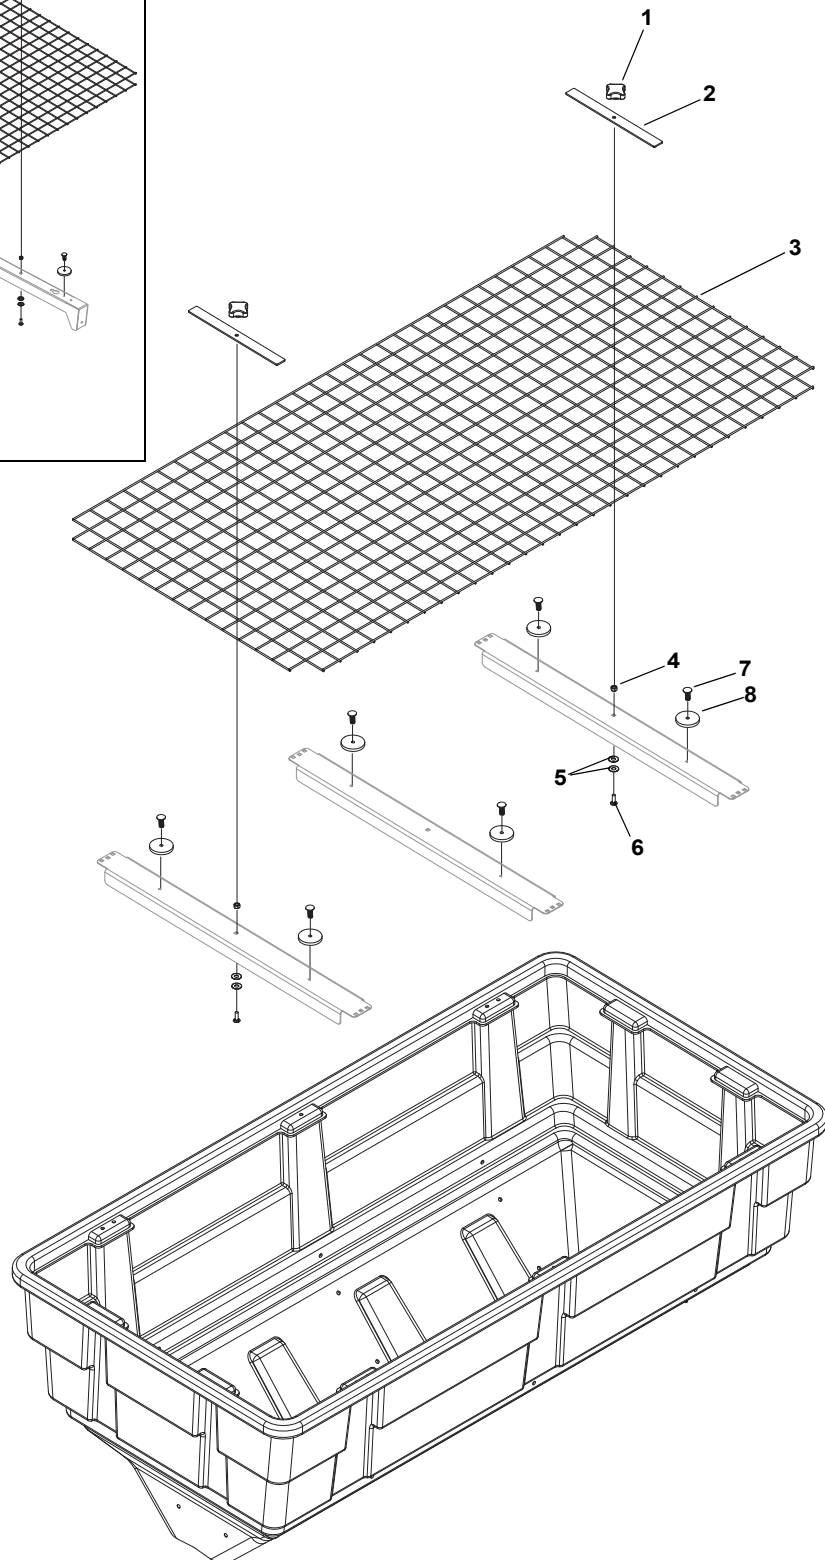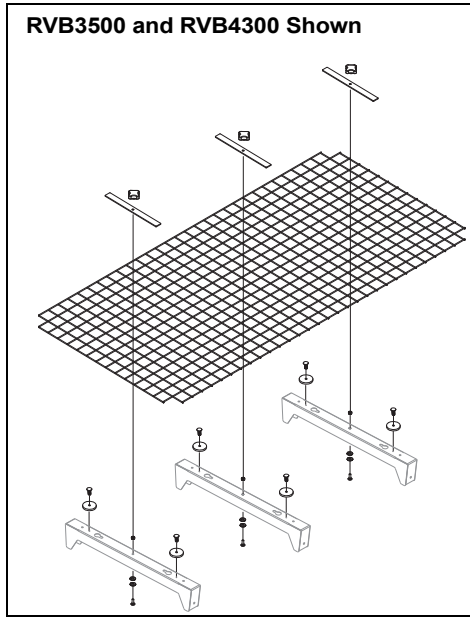


HOPPER SCREEN - RVB 750, 1500, 2000, 2500, 3000, 3500, 4300

ITEM	PART NO.	DESCRIPTION	QTY
1	96116419	Knob RVB 750, 1500, 2000, 2500, 3000.....	2
		RVB 3500, 4300.....	3
2	96116472	Plate, Grate RVB 750, 1500, 2000, 2500, 3000.....	2
		RVB 3500, 4300.....	3
3	96115346	Grate, Top Screen, RVB 750.....	1
	96116470	Grate, Top Screen, RVB 1500, 2000.....	1
	96116471	Grate, Top Screen, RVB 2500, 3000.....	1
	96116939	Grate, Top Screen, RVB 3500, 4300.....	1
4	98100120	HN, 3/8"-16, SS RVB 750, 1500, 2000, 2500.....	2
		RVB 3500, 4300.....	3
5	98100347	PW, 1.25" O.D. x 0.531" I.D. x 5/8" RVB 750, 1500, 2000, 2500.....	4
		RVB 3500, 4300.....	6
6	98100356	CB, 3/8"-16 x 1.25", SS RVB 750, 1500, 2000, 2500.....	2
	98100536	CB, 3/8"-16 x 1.75", SS RVB 3500, 4300.....	3
7	98100590	Rivet, Ribbed Shank, Nylon.....	6
8	96115013	Isolator, Screen.....	6

NOTE: RVB 2500 Shown

AUGER DRIVE - RVB 10, 500, 750, 1500, 2000, 2500, 3000

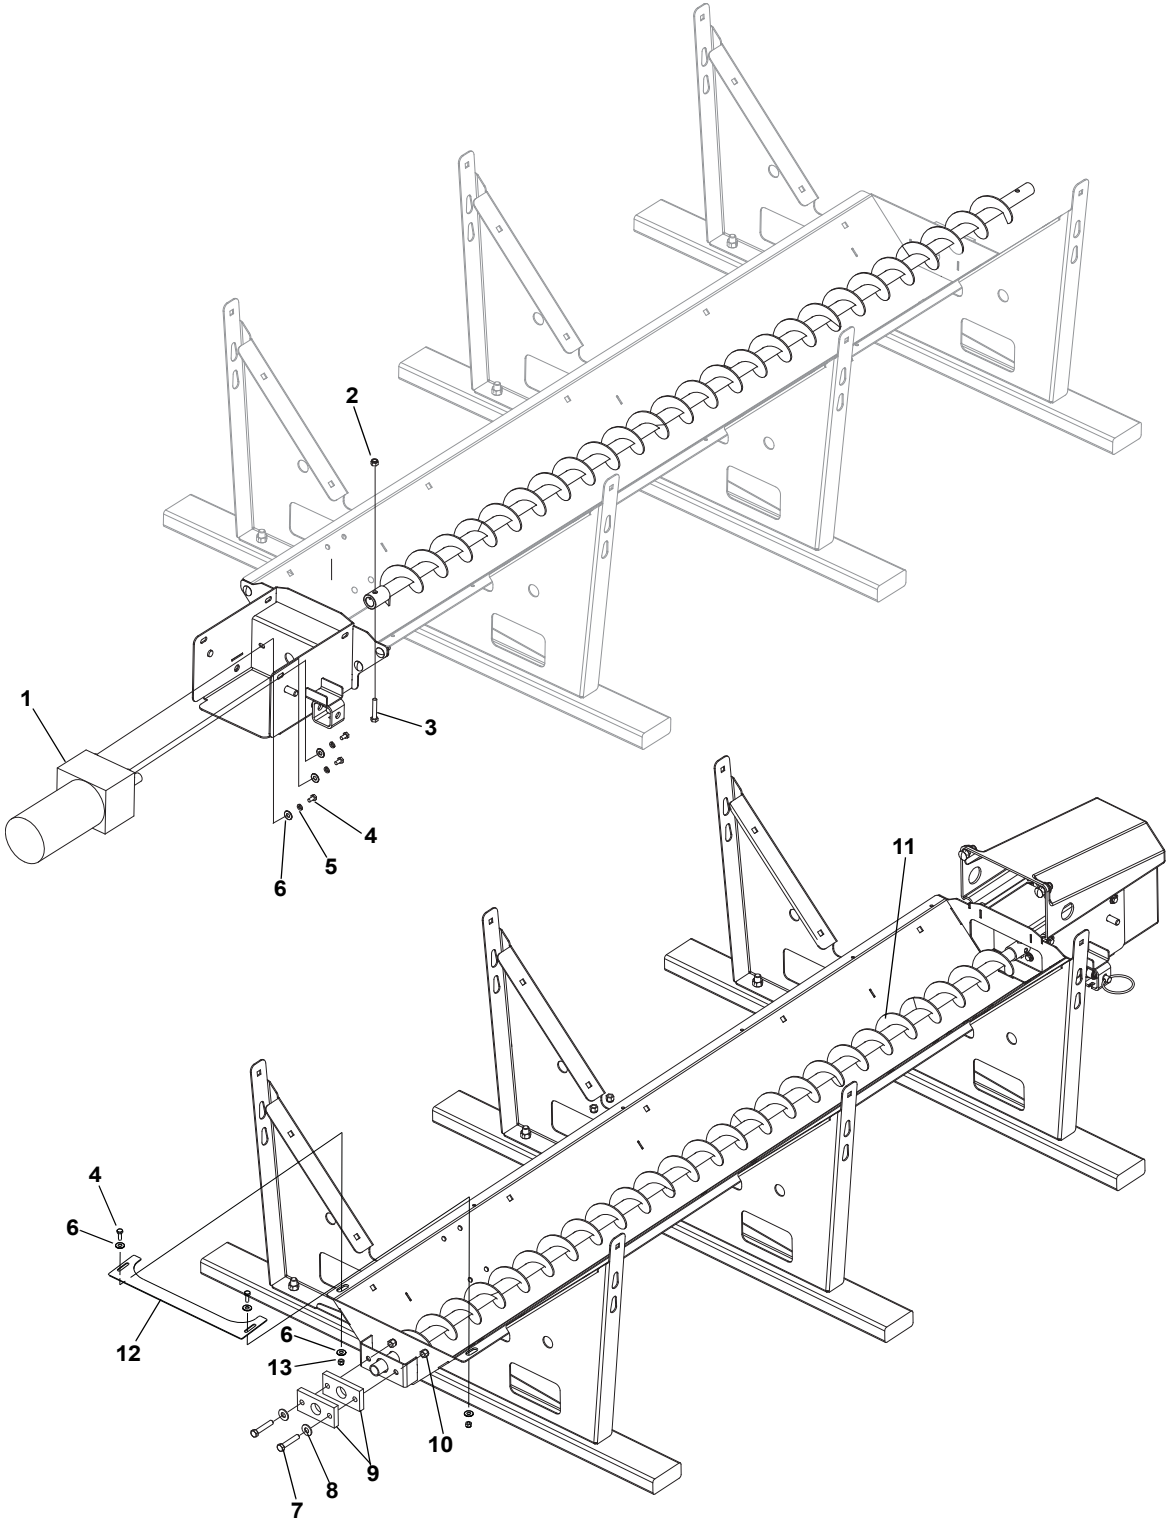


AUGER DRIVE - RVB 10, 500, 750, 1500, 2000, 2500, 3000

ITEM	PART NO.	DESCRIPTION	QTY
1	96114805	Motor, Auger Drive	1
	96116860	Motor, Auger Drive, RVB 10/500 (For Serial Numbers starting with 1RVBDS or 50RVBDS).....	1
2	98100118	LN, 5/16"-18, SS	1
3	98100115	HHCS, 5/16"-18 X 1.75", SS	1
4	98100344	HHCS, 1/4"-20 x 1/2", SS.....	5
5	98009226	LW, 1/4", SS	3
6	98100122	PW, 1/4", SS.....	7
7	98100213	HHCS, 3/8"-16 x 1.5", SS (RVB 10, 500, 750).....	2
	98100541	HHCS, 3/8"-16 x 2.0", SS (RVB 1500, 2000, 2500, 3000).....	2
8	98100124	PW, 3/8", SS.....	2
9	96114956	Bearing, Auger	
		RVB 10, 500, 750	1
		RVB 1500, 2000, 2500, 3000	2
10	98100339	LN, 3/8"-16, SS	2
11	96116422	Weldment, Auger, RVB 10	1
	96116461	Weldment, Auger, RVB 500	1
	96116462	Weldment, Auger, RVB 750	1
	96116463	Weldment, Auger, RVB 1500, 2000, 2500, 3000	1
12	96117926	Plate, Cover, Rear.....	1
13	98100336	LN, 1/4"-20, SS	2

NOTE: RVB 2500 Shown


AUGER DRIVE - RVB 3500 and 4300

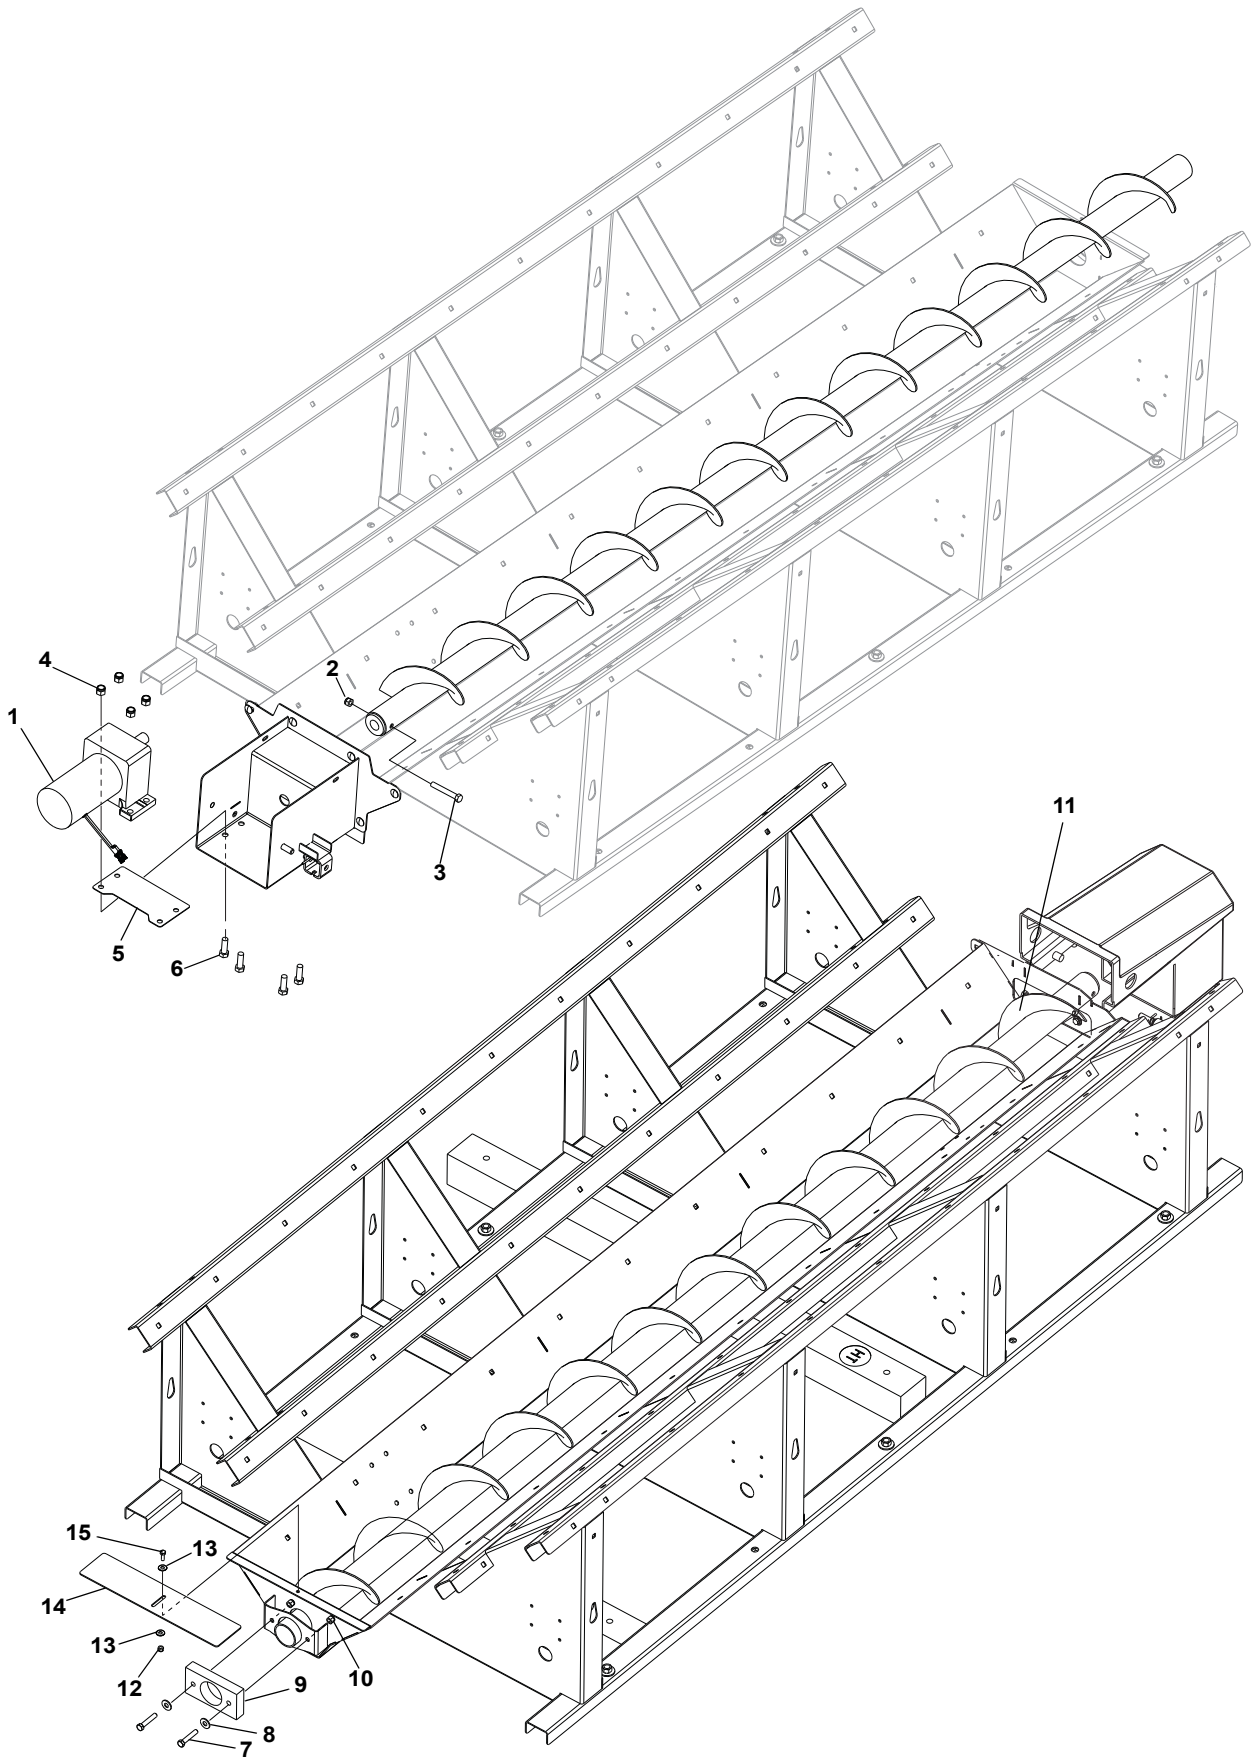

AUGER DRIVE - RVB 3500 and 4300

ITEM	PART NO.	DESCRIPTION	QTY
1	96116904	Motor, Auger Drive	1
2	98100604	HN, 7/16"-14, SS	1
3	98100603	HHCS, 7/16"-14 x 3.0", SS	1
4	98100349	LN, 1/2"-13, SS	4
5	96117664	Rubber Isolator	1
6	98100602	HHCS, 1/2"-20 x 1-1/2", SS	4
7	98100541	HHCS, 3/8"-16 x 2.0", SS	2
8	98100124	PW, 3/8", SS	2
9	96116938	Bearing, Auger	1
10	98100339	LN, 3/8"-16, SS	2
11	96116926	Weldment, Auger	1
12	98100336	LN, 1/4"-20, SS	1
13	98100122	PW, 1/4", SS	2
14	96117716	Plate, Auger Cover	1
15	98100334	HHCS, 1/4"-20 x 3/4", SS	1


CHUTE AND SPINNER

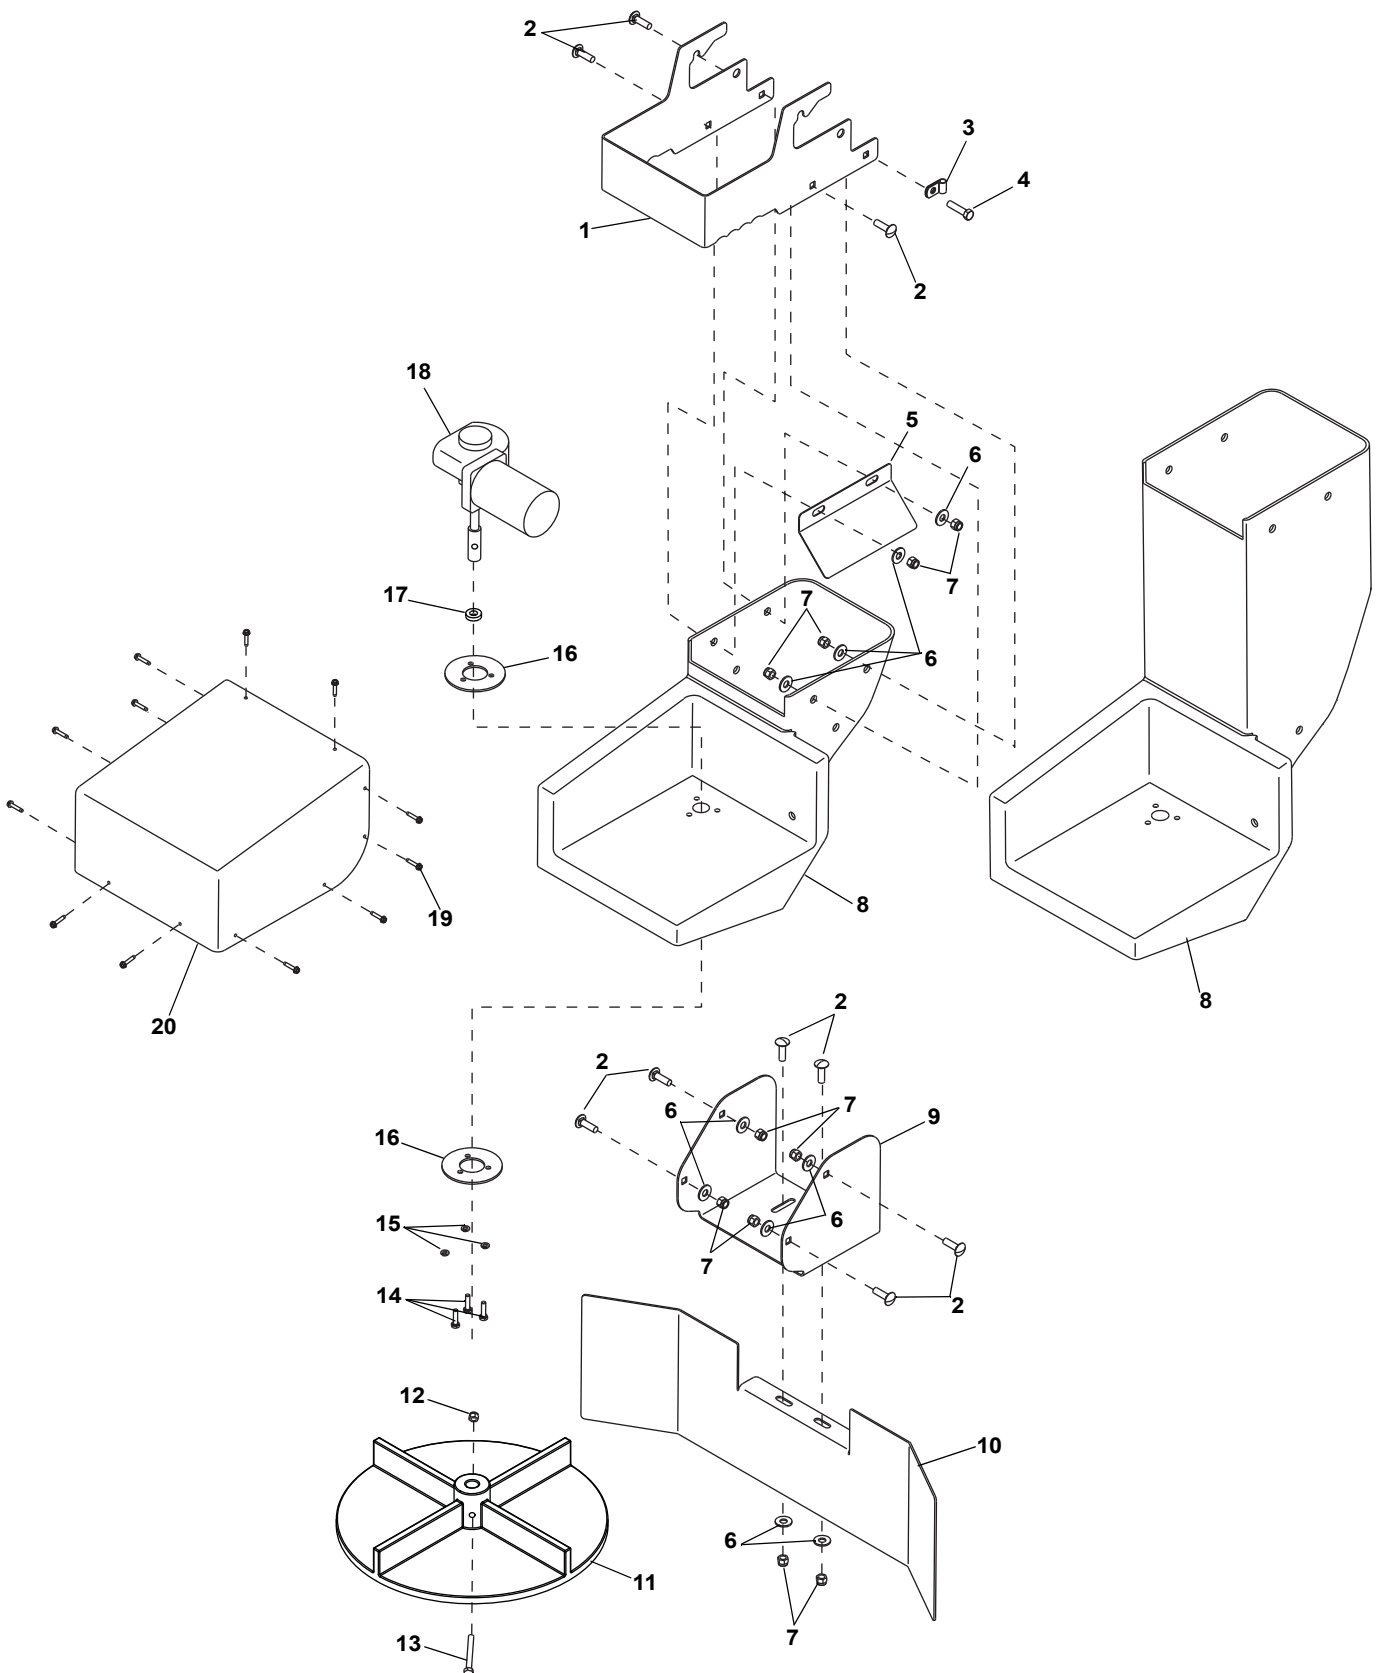



CHUTE AND SPINNER

ITEM	PART NO.	DESCRIPTION	QTY
1	96114887	Bracket, Handle Chute (RVB 10, 500, 750,1500, 2000, 2500, 3000)	1
	96116948	Bracket, Handle Chute (RVB 3500, 4300)	1
2	98100356	CB, 3/8"-16 x 1-1/4", SS	9
3	96102428	Clamp, Cable	1
4	98100213	HHCS, 3/8"-16 x 1-1/2", SS	1
5	96114960	Baffle, Internal Chute (Short Chute)	1
	96117729	Baffle, Internal Chute (Long Chute)	1
6	98100124	PW, 3/8", SS	10
7	98100339	LN, 3/8", SS	10
8	96114493	Chute, Short, 16-5/8"	1
	96114806	Chute, Long, 28-3/4"	1
9	96114494	Bracket, Shield Mount	1
10	96114496	Shield Spinner	1
11	96118123	Spinner, 16" Urethane	1
12	98100118	LN, 5/16", SS	1
13	98100281	HHCS, 5/16"-18 x 2-1/2", SS	1
14	98100542	HHCS, 1/4"-28 x 1", SS	3
15	98009226	LW, 1/4", SS	3
16	96114808	Plate, Spinner Support	2
17	96115008	Seal, Shaft	1
18	96114810	Motor, Gear Drive Spinner	1
19	98100488	HWHST, #10-16 x 1", SS	12
20	96114497	Cover, Spinner Chute	1



DECALS - RVB 10, 500, 750, 1500

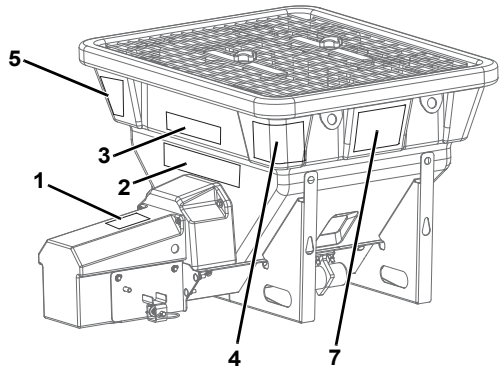



RVB 10

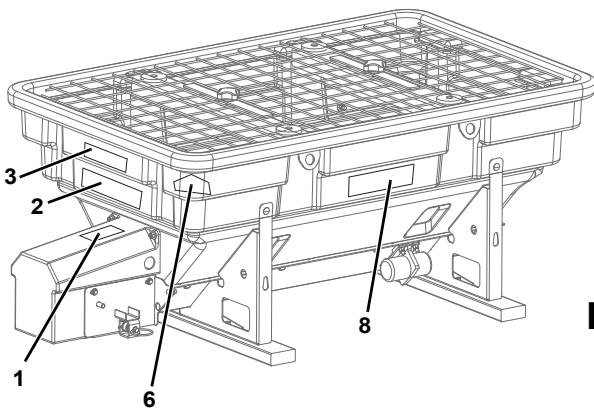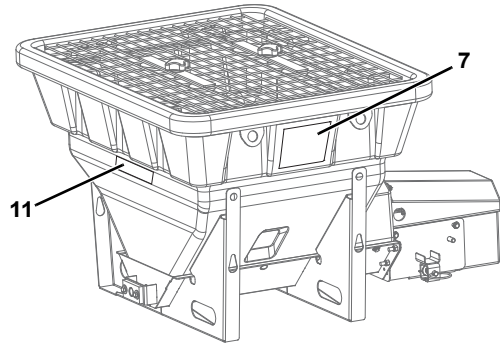


RVB 500

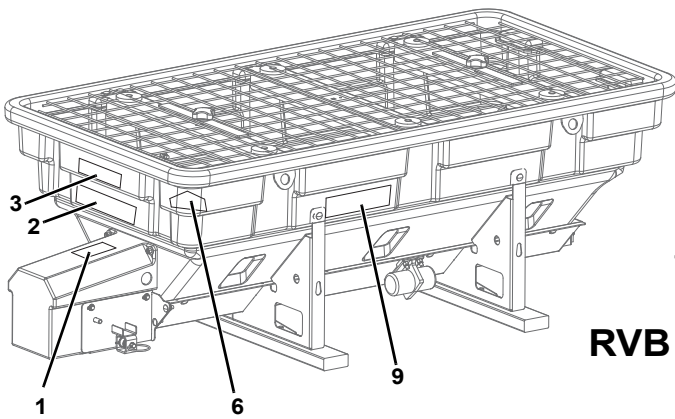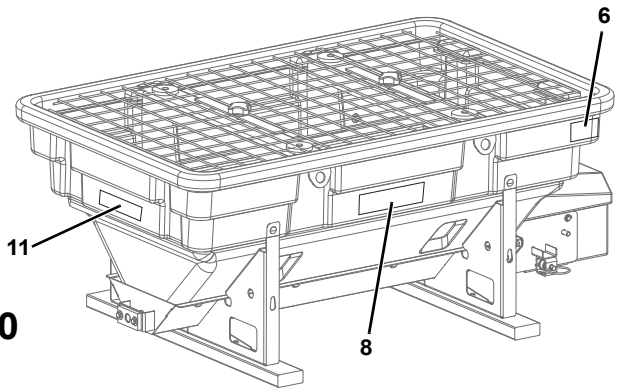


RVB 750

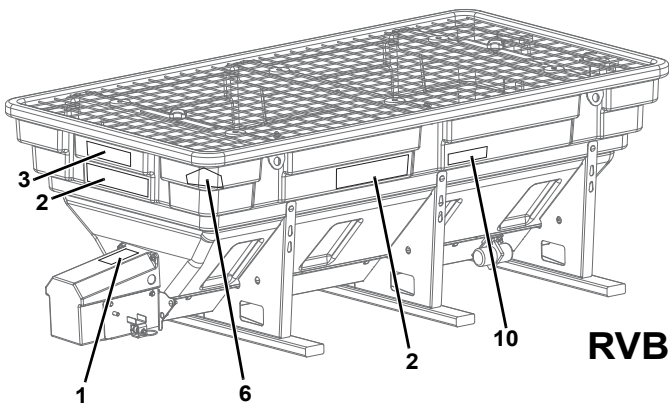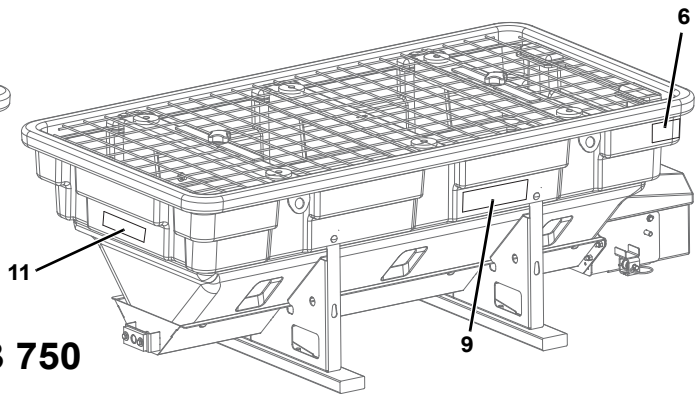


RVB 1500

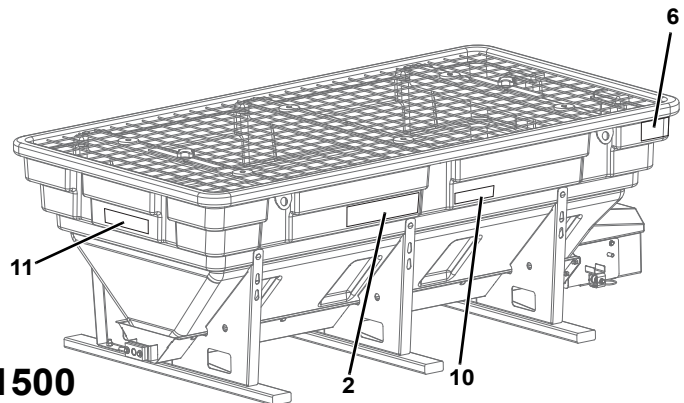

DECALS - RVB 10, 500, 750, 1500


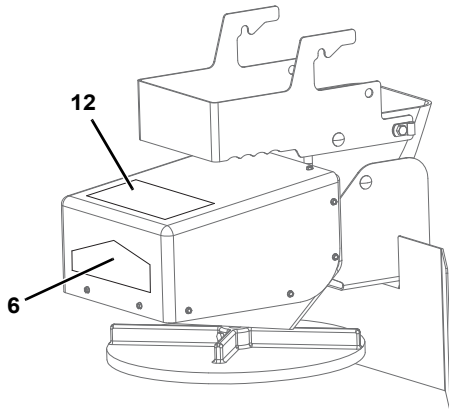


CHUTE

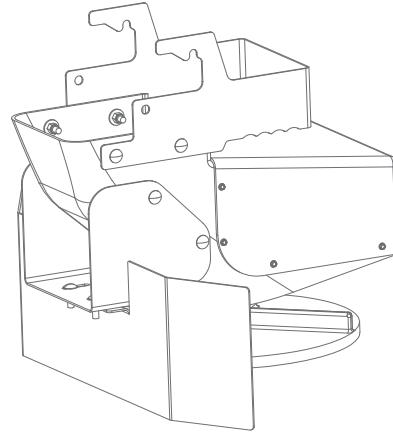


ITEM	PART NO.	DESCRIPTION	QTY.
1		Decal, Warning, RVB	1
2		Decal, 'Sno-Way'	1
3		Decal, 'Move it'	1
4		Decal, Reflective, PS	1
5		Decal, Reflective, DS	1
6		Decal, Reflective	1
7		Decal, RVB 10	2
8		Decal, RVB 500	2
9		Decal, RVB 750	2
10		Decal, RVB 1500	2
11		Decal, Warning, Auger	1
12		Decal, Warning, Spinner	1
13	96116658	Decal Kit, RVB 10 (Not Shown)	1
	96116659	Decal Kit, RVB 500 (Not Shown)	1
	96116660	Decal Kit, RVB 750 (Not Shown)	1
	96116661	Decal Kit, RVB 1500 (Not Shown)	1


DECALS - RVB 2000, 2500, 3000, 3500, 4300

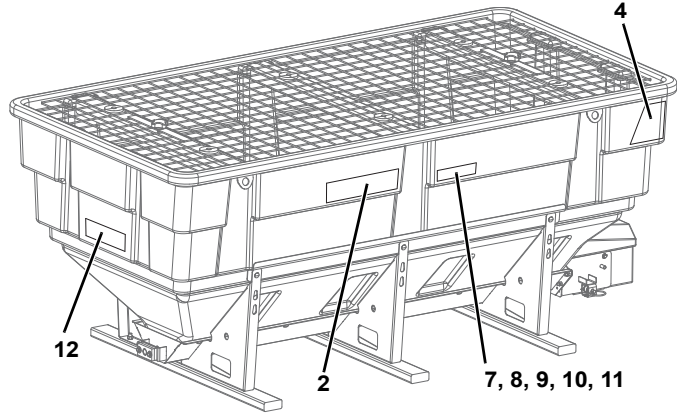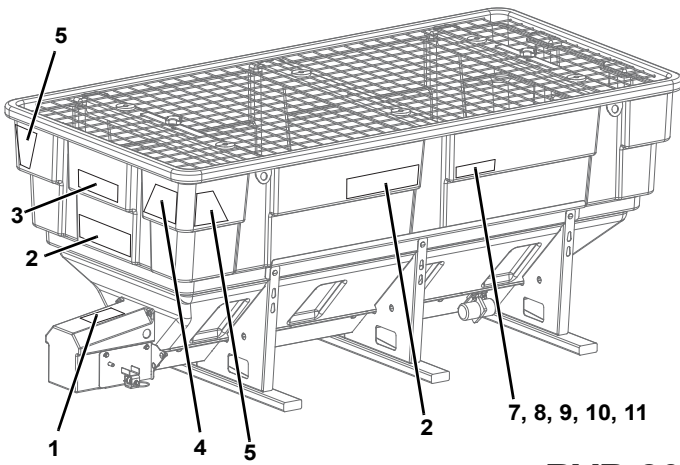

RVB 2000, 2500, 3000, 3500, 4300

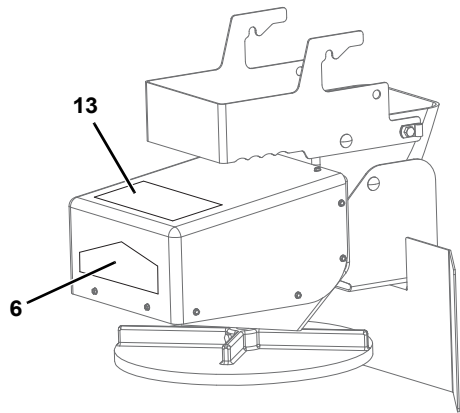


CHUTE

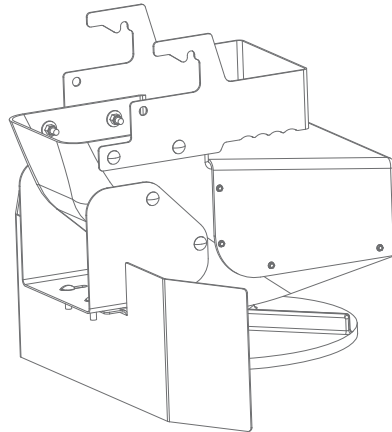






ITEM	PART NO.	DESCRIPTION	QTY.
1		Decal, Warning, RVB.....	1
2		Decal, 'Sno-Way'.....	1
3		Decal, 'Move it'.....	1
4		Decal, Reflective, PS.....	1
5		Decal, Reflective, DS.....	1
6		Decal, Reflective.....	1
7		Decal, RVB 2000.....	2
8		Decal, RVB 2500.....	2
9		Decal, RVB 3000.....	2
10		Decal, RVB 3500.....	2
11		Decal, RVB 4300.....	2
12		Decal, Warning, Auger.....	1
13		Decal, Warning, Spinner.....	1
14	96116662	Decal Kit, RVB 2000 (Not Shown).....	1
	96116663	Decal Kit, RVB 2500 (Not Shown).....	1
	96118042	Decal Kit, RVB 3000 (Not Shown).....	1
	96117813	Decal Kit, RVB 3500 (Not Shown).....	1
	96117814	Decal Kit, RVB 4300 (Not Shown).....	1

DROP SPREADER HOOD - RVB 10, RVB 500

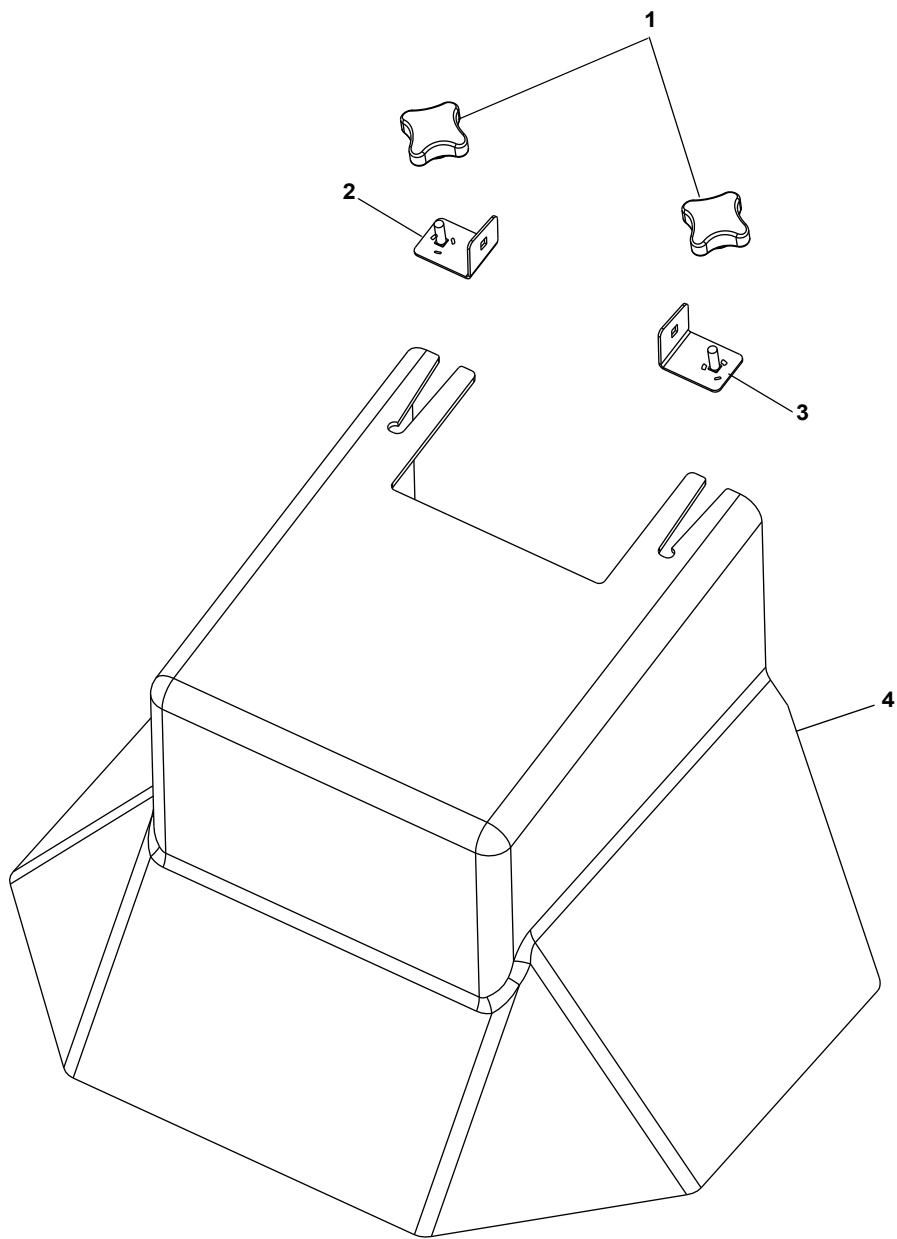


ITEM	PART NO.	DESCRIPTION	QTY
1	96116419	Knob, Grate, RVB	2
2	96116714	Weldment, Hold Down, DS	1
3	96116715	Weldment, Hold Down, PS	1
4		Shield, Drop Spreader	1

ACCESSORIES

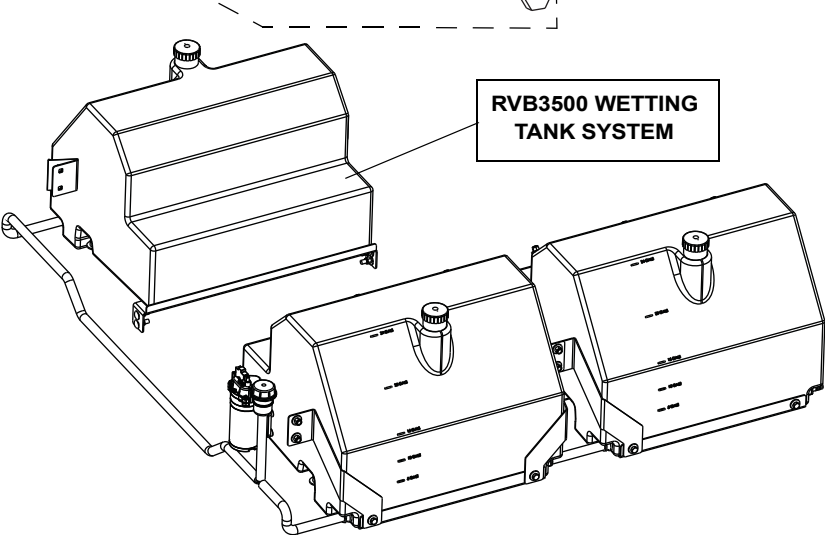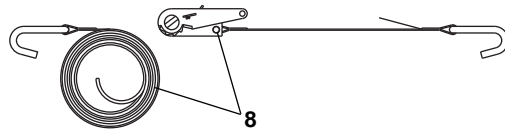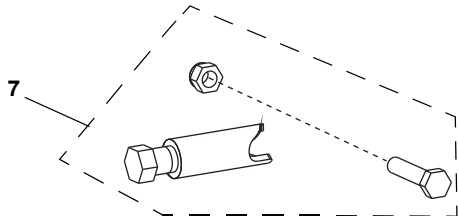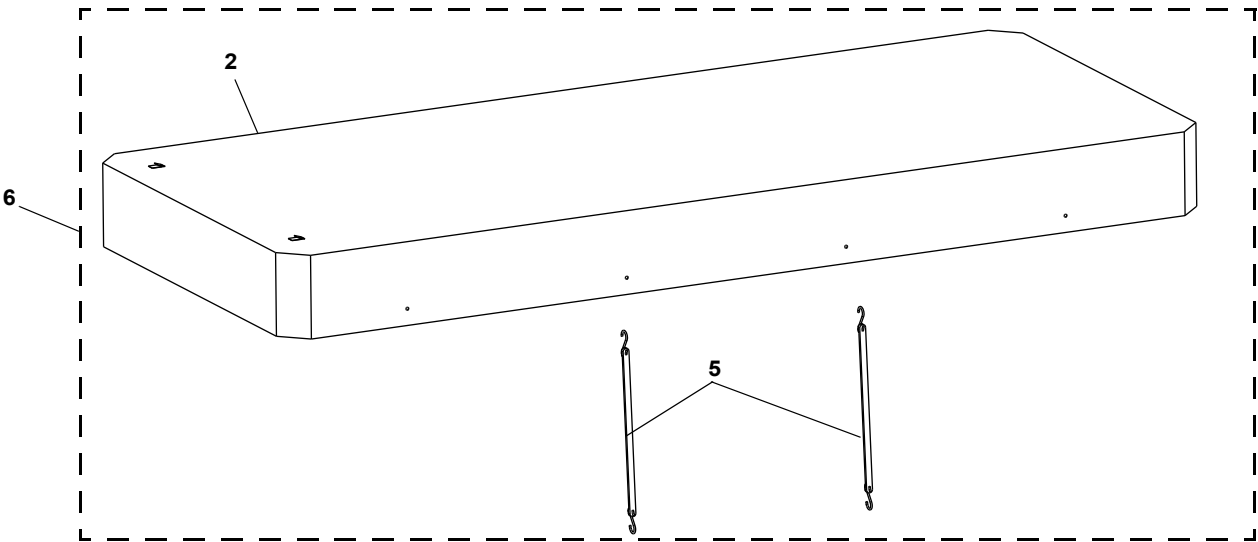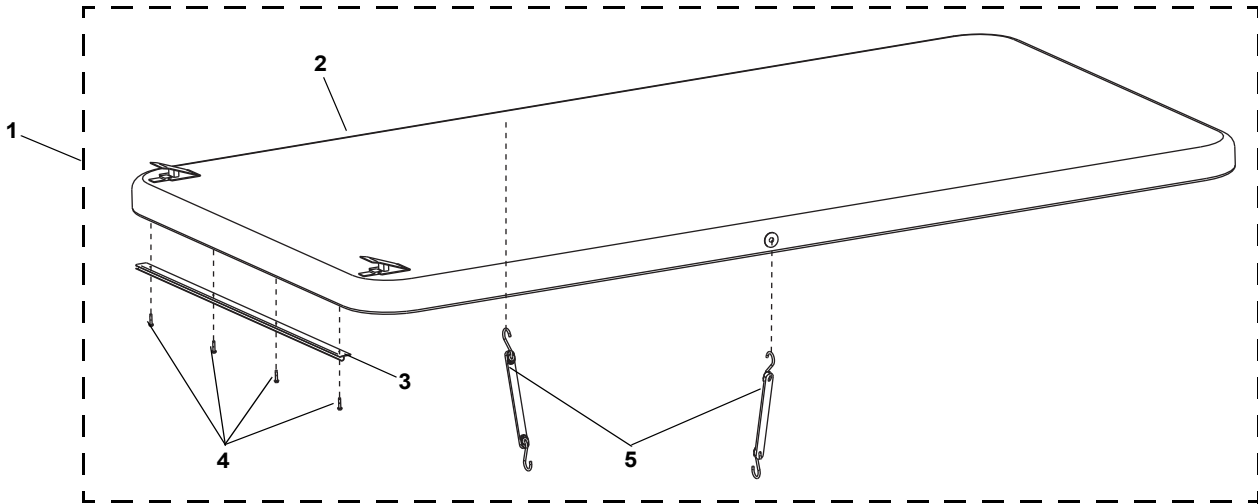

RVB3500 WETTING TANK SYSTEM

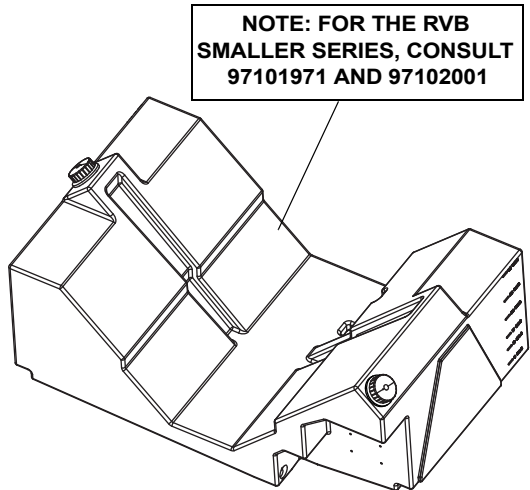

NOTE: FOR THE RVB SMALLER SERIES, CONSULT 97101971 AND 97102001

ACCESSORIES

ITEM	PART NO.	DESCRIPTION	QTY
1		Tarp Kit, RVB 10	1
		Tarp Kit, RVB 500	1
		Tarp Kit, RVB 750	1
		Tarp Kit, RVB 1500, 2000	1
		Tarp Kit, RVB 2500	1
2		Tarp.....	1
3		Aluminum Extrusion.....	1
4		Screw, Self-Tapping.....	4
5		Shock Cord, Rubber, 9" (RVB 10, 500, 750)	4
		Shock Cord, Rubber, 14" (RVB 1500, 2000, 2500, 3000)	2
		Shock Cord, Rubber, 24" (RVB 3500, 4300)	2
6		Tarp Kit, RVB 3000 (Not Shown)	1
		Tarp Kit, RVB 3500, 4300	1
7	96115106	Auger Relief Tool Kit	1
8		Kit, Ratchet Strap (Includes 4 Ratchet Straps)	1

NOTE: See your whole goods price sheet for cost.

NUMERICAL INDEX

PART NO.	PAGE	ITEM	PART NO.	PAGE	ITEM	PART NO.	PAGE	ITEM
96102428	26	3	96116422	22	11	98009226	4	22
96114493	26	8	96116457	6	4		6	20
96114494	26	9	96116458	6	4		8	20
96114496	26	10	96116459	6	4		22	5
96114497	26	20	96116461	22	11		26	15
96114805	22	1	96116462	22	11	98100115	22	3
96114806	26	8	96116463	22	11	98100118	22	2
96114808	26	16	96116470	20	3		26	12
96114810	26	18	96116471	20	3	98100120	8	28
96114887	26	1	96116472	16	2		16	4
96114903	4	10		18	2		18	4
	6	10		20	2		20	4
	8	10	96116473	6	27	98100122	4	23
96114956	22	9	96116477	6	3		6	22
96114960	26	5	96116658	28	13		8	22
96115008	26	17	96116659	28	13		22	6
96115013	16	7	96116660	28	13		24	13
	18	8	96116661	28	13	98100124	4	7
	20	8	96116662	29	14		6	24
96115106	32	7	96116663	29	14		8	24
96115345	18	3	96116714	30	2		11	2
96115346	20	3	96116715	30	3		12	2
96115505	4	11	96118848	4	27		13	2
	6	11		6	29		14	2
	8	11		8	30		22	8
96116210	4	8	96116860	22	1		24	8
	6	5	96116902	8	6		26	6
	8	5	96116904	24	1	98100125	8	29
96116213	13	6	96116905	14	5		16	5
96116214	13	4	96116906	14	6	98100128	8	25
96116215	11	1	96116907	14	1	98100213	22	7
	12	1	96116920	8	8		26	4
	13	1	96116926	24	11	98100281	26	13
96116217	13	7	96116938	24	9	98100334	4	25
96116218	13	5	96116939	20	3		6	30
96116220	12	7	96116943	8	3		8	32
96116221	12	5	96116944	14	4		24	15
96116223	12	6	96116948	26	1	98100336	4	17
96116224	12	4	96117659	8	4		6	18
96116226	10	2	96117664	24	5		8	31
	11	6	96117716	24	14		22	13
96116227	11	4	96117729	26	5		24	12
96116229	11	7	96117813	29	14	98100339	4	5
96116230	11	5	96117814	29	14		6	7
96116363	4	24	96117926	22	12		8	7
	6	23	96118008	9	11		10	1
96116412	4	4	96118042	29	14		11	3
	6	6	96118044	9	11		12	3
96116414	4	1	96118123	26	11		13	3
96116419	16	1	96118596	8	23		14	3
	18	1	96118975	4	28		22	10
	20	1		6	31		24	10
	30	1		8	33		26	7
96116421	16	3						

NUMERICAL INDEX

PART NO.	PAGE	ITEM	
98100344	4	20	
	6	21	
	8	21	
	22	4	
98100347	8	26	
	16	8	
	18	5	
	20	5	
98100349	8	18	
	24	4	
98100356	4	6	
	6	2	
	8	2	
	10	3	
	11	8	
	12	8	
	13	8	
	14	7	
	18	6	
	20	6	
	26	2	
	98100359	4	19
		6	19
		8	19
11		9	
12		9	
13		9	
14		8	
98100488	26	19	
98100536	4	2	
	6	26	
	16	9	
	20	6	
98100541	4	26	
	22	7	
	24	7	
98100542	26	14	
98100565	6	25	
98100590	16	6	
	18	7	
	20	7	
98100593	6	28	
98100601	8	27	
98100602	24	6	
98100603	24	3	
98100604	24	2	

PART NO.	PAGE	ITEM
----------	------	------

PART NO.	PAGE	ITEM
----------	------	------

SNO-WAY[®] INTERNATIONAL, INC.

SNO-WAY[®]
SNOW & ICE CONTROL EQUIPMENT

Hartford, WI 53027 USA
Website: www.snoway.com
©2024 Sno-Way[®] International